


Install cylinder head and tighten nut

Torque: 1.2-1.6 Kg-m

* Tighten nuts opposite to each other
2-3 turns each time

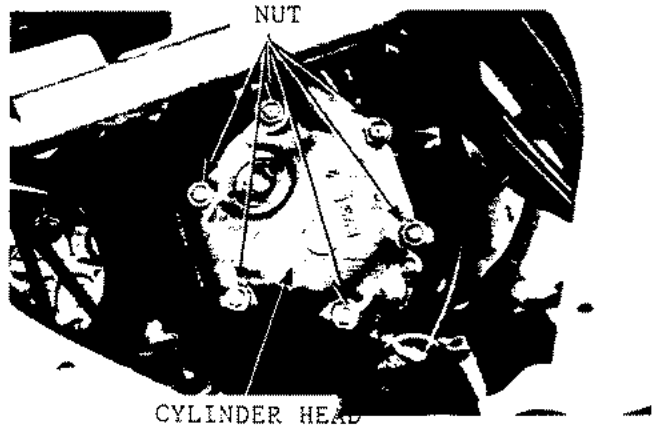

Install cylinder head water hose into
cylinder head and tighten clamp

Install spark plug

Torque: 1.5-2.0 Kg-m

Install spark plug cap

Connect bipass tube

Install coupler holder and CDI unit
(17-3)

Install air cleaner case and fuel
tank (section 4)

Insert radiator fluid which was drained
when radiator was removed (5.4)

ADjust RC valve control cable (2.17)

Install lowerfairing, side covers and
seat (section 15)

