

---

TROUBLE SHOOTING:

Clutch Slip When Accelerating

- Not enough play
- Damage to clutch discs
- Clutch springs bent

Clutch Movement Not Balanced

- Clutch outer groove damaged
- Transmission oil leakage
- Recommended transmission oil not used

Clutch Will Not Engage, Clutch Engaged But Still Moves

- Too much play
- Clutch plate warped, bent

Lever Movement Too Heavy

- Clutch cable damaged or clogged
- Lifter damaged
- Cable not routed correctly
- Clutch lubrication faulty

Gears Difficult To Engage

- Clutch cable adjusted poorly
- Shift fork bent, damaged
- Shift drum cam groove damaged
- Shift spindle slot clogged

Gears Jump Out

- Gear docks damaged
- Shift shaft bent
- Stopper arm damaged
- Shift fork bent, damaged