


KICKSTARTER REMOVAL

Kickstarter Idle Gear Removal

Remove R.crankcase cover (8.3)
 Remove clutch (8.3)
 Remove snap ring and thrust washer and
 take out counter shaft idle gear and thrust
 washer

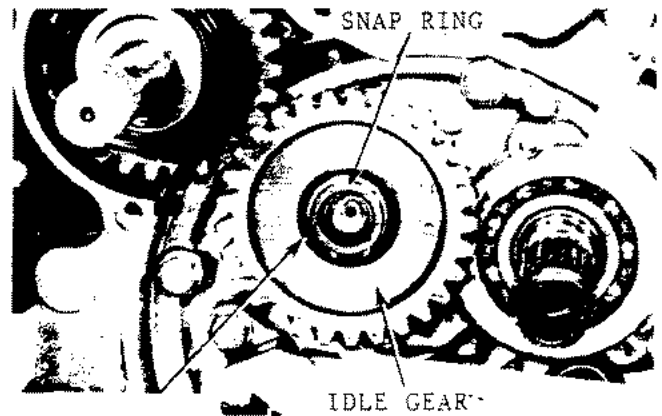

KICKSTARTER SPINDLE REMOVAL

* When adjusting kickstarter spindle, it is not necessary to remove clutch and kick-starter idle gear

Remove kick return spring from R crankcase
 Remove kickstarter spindle from R.crankcase
 as a set.
 Separate kickstarter spindle

