

L. Mainshaft Bearing

Remove L. mainshaft bearing

Bearing remover	07936-3710300
Remover handle	07936-3710100
Remover sliding weight	07741-0010201




Insert new L. mainshaft bearing

- * Insert with bearing mark facing outwards
- * Insert into crankcase using weight


Special Tool: Driver handle 07949-3710001

Standard Tool: Outer driver (37x40mm) 07746-0010200

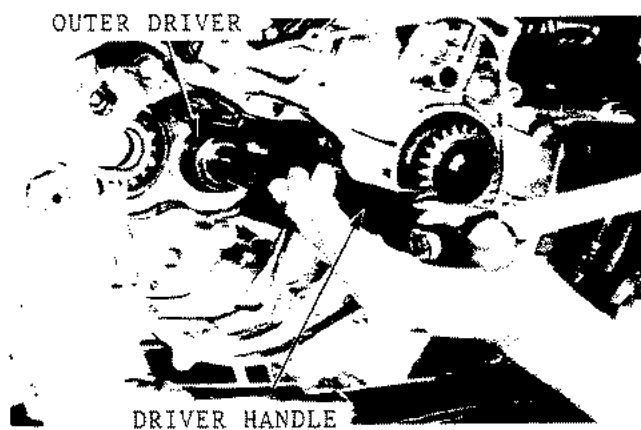

Inspect shift spindle oil seal and replace if necessary

Apply grease to lip

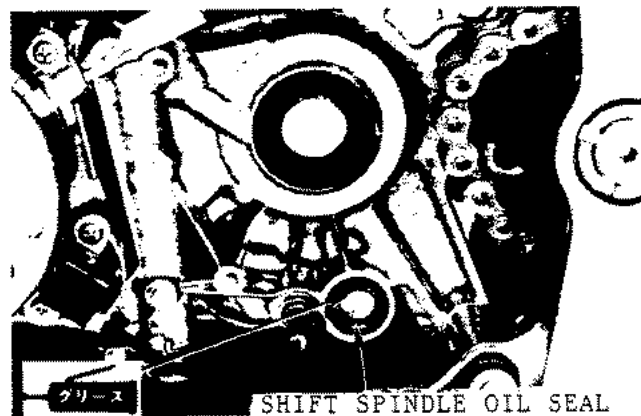

MAINSHAFT

Use bearing puller and remove R. mainshaft bearing

