



Install transmission as an assembly with bearing holder into crankcase

Install 6 bolts in opposing positions, 2-3 turns each time

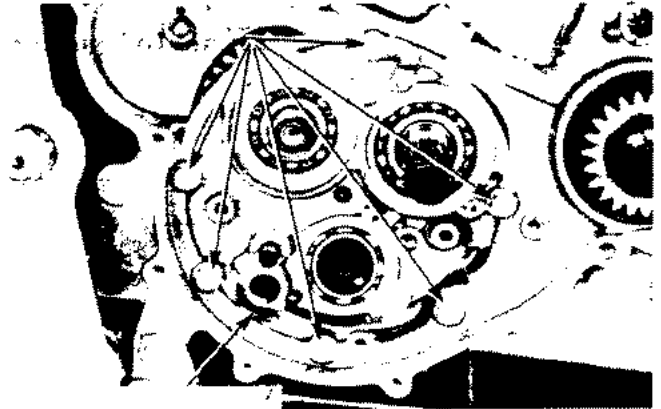

Install new countershaft oil seal into crankcase

- * Install at same height as crankcase edge
- * Install taking care not to damage oil seal lip and spring
- * Apply tape to countershaft drive sprocket and apply grease to oil seal lip

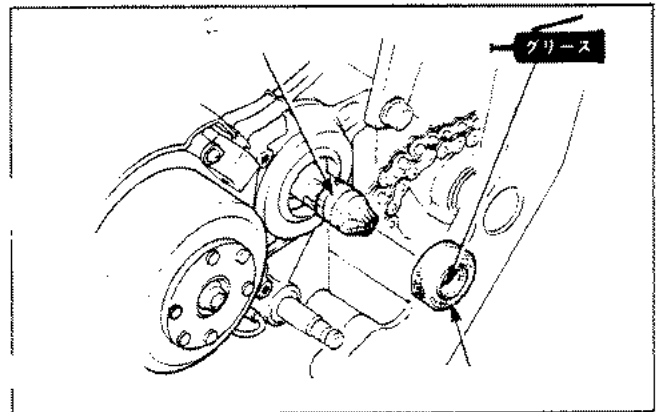

Install drive sprocket, fixing plate and lock plate and tighten bolts

Align lock plate hook so that the bolts can not rotate

Install the following:

- gearshift linkage (8.10)
- kickstarter (8.11)
- clutch (8.13)

