

# 10. AC GENERATOR

MAINTENANCE INFORMATION.....	10- 1	AC GENERATOR INSTALLATION .....	10- 3
PULSE GENERATOR REMOVAL .....	10- 2	PULSE GENERATOR INSTALLATION .....	10- 3
AC GENERATOR REMOVAL .....	10- 2		

## MAINTENANCE INFORMATION

### Warning

- This section explains how to remove the AC Generator and Pulse Generator
- Refer to section 16 for AC Generator troubleshooting and inspection
- Refer section 17 for pulse generator troubleshooting and inspection

### Torques:

Flywheel	8.0-9.0kg-m
Stator	1.0-1.4kg-m

### TOOLS:

#### Special Tools:

Rotor Puller Attachment      07HMC-KV30100

#### Standard Tools

Universal holder                07725-0030000

Flywheel puller                07733-0010000