


**PULSE GENERATOR REMOVAL**


Remove seat, side covers and lower fairing ( section 15)

Remove pulse generator coupler connection

If removing AC Generator, disconnect AC Generator coupler

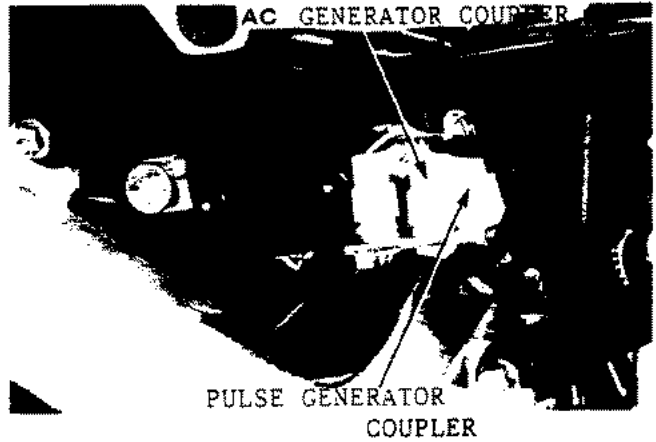


Remove 4 bolts and remove L. crankcase cover

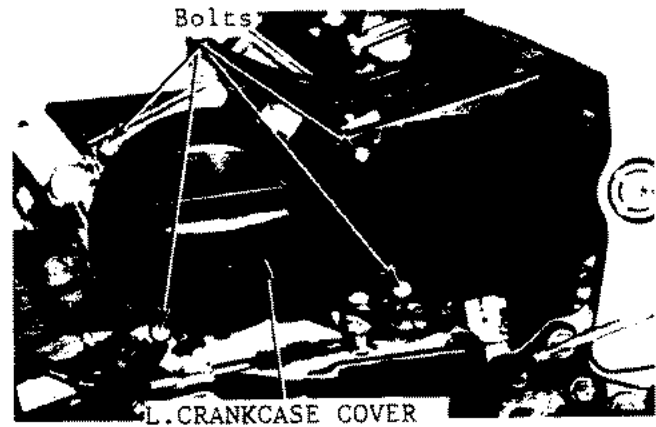

Remove connector from neutral switch

Remove pulse generator

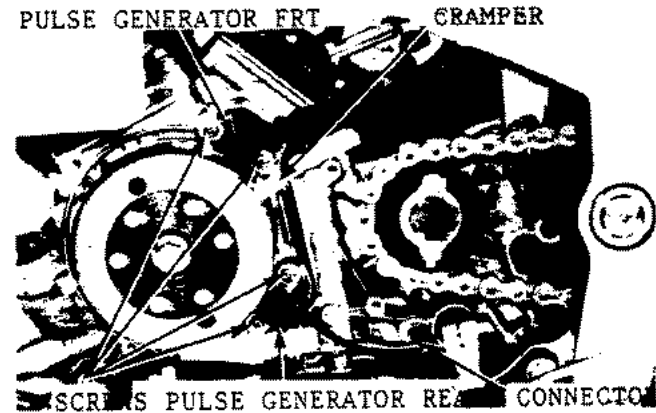

\* Take care not to lose wire crammer

**AC GENERATOR REMOVAL**

Remove AC Generator coupler connection

Use a universal holder and fix flywheel

Standard Tool - Universal Holder 07725-0030000

Remove flywheel bolt

