

Tighten upper crankcase bolts

Torque : 8 mm bolt 2.1-2.5kg-m  
6 mm bolt 1.0-1.4kg-m

\* Tighten bolts 2-3 turns at a time,  
opposing each other

Install removed parts in reverse order to  
removed

