


Remove speedometer gearbox, dust seal and gear box retainer from left side

Remove 6 bolts and remove L. brake disc housing

\* Do not remove more than brake disc and housing

L. DISC HOUSING BOLT GEARBOX

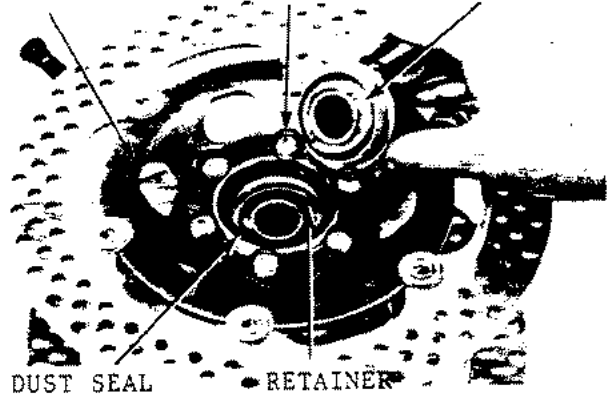


Standard tools:

Bearing remover shaft

07746-0050100

Bearing remover head (20MM)

07746-0050600

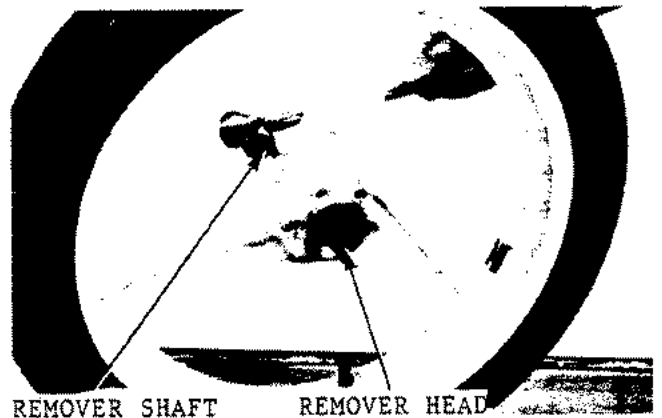

REMOVER SHAFT REMOVER HEAD

ASSEMBLY

\* Brake disc performance will be affected if oil or other foreign materials are apply to disc. Clean totally before use.

AXLE BOLT R. BRAKE DISC

