

Insert R. bearing and distance collar

Standard tools

Driver Handle A
07749-0010000

Pilot (20mm)
0.16-0040500

Outer driver (42x47mm)
07746-0010300

* Before installing bearing check that distance collar is installed

Insert L-R bearing with same standard tool
Install gearbox retainer and dust seal
Apply grease to dust seal lip
Apply grease to gear box align gearbox shoulder and retainer groove and install

Install left/right disc housing

Tighten disc housing nut

Torque: 1.4-1.6 Kg-m

install dust seal and apply grease to lip

install wheel

INSTALLATION

While aligning brake pad gap with brake disc, set front wheel

* Take care not to damage brake pads, disc

Move axle from left
Align speedometer gear box stopper with L. fork bottom case stopper

Install L. axle pinch bolt

Torque : 1.5-2.0 Kg-m

* Align axle line with bottom case

: 1.5-2.0kg-m

