

Remove air valve cap push air valve and drain air from forks

Loosen fork bolt
loosen top bridge bolt
Remove handlebars (12.3)

* Do not hang brake hose on front brake master cylinder
* Oil pressure can be affected by air entering master cylinder, fix it at the position the same as the installed position

Pull out stopper ring

Loosen bottom bridge bolt and remove front forks

SEPARATION

Remove fork bolt

Remove spacer, spring seat, spring

Pump fork pipe and drain oil from front fork

