


Remove stopper ring from seat pipe

Remove seat pipe from fork pipe

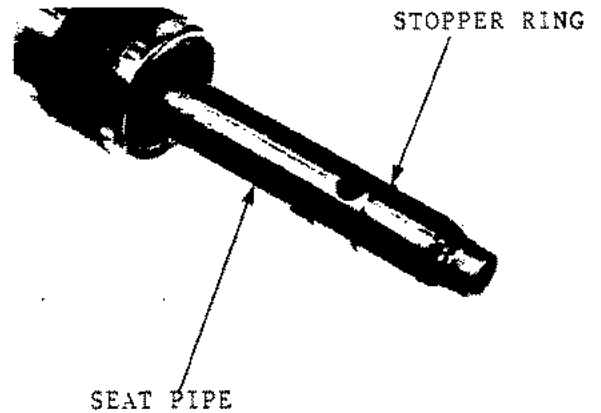

Inspection


Measure for spring free play

Service Limit: 285.7mm (replace if below)



Inspect fork pipe, seat pipe, oil lock piece, rebound spring, bottom case and piston ring for wear and damage

Replace if any abnormalities

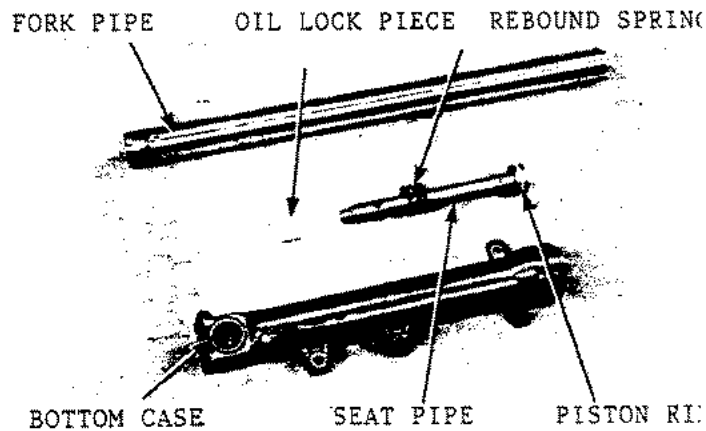

Inspect spacer, spring seat for damage.
If any then replace

