


Install snap ring

Install dust seal


* Ensure that snap ring is installed in bottom case groove

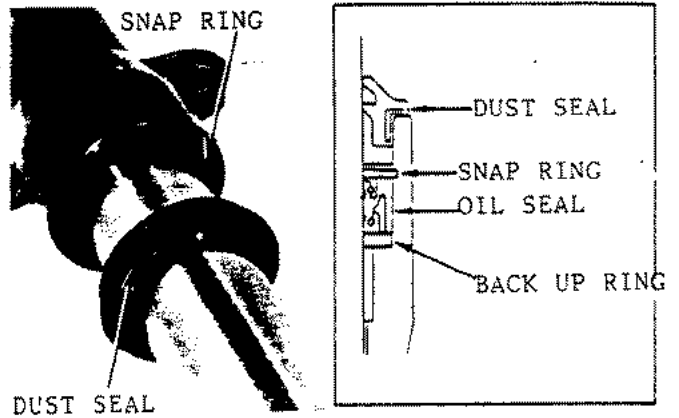

Fully extend fork pipe and fill with ATF fluid to recommended level

Recommended level : 108mm

Total Capacity : 383cc

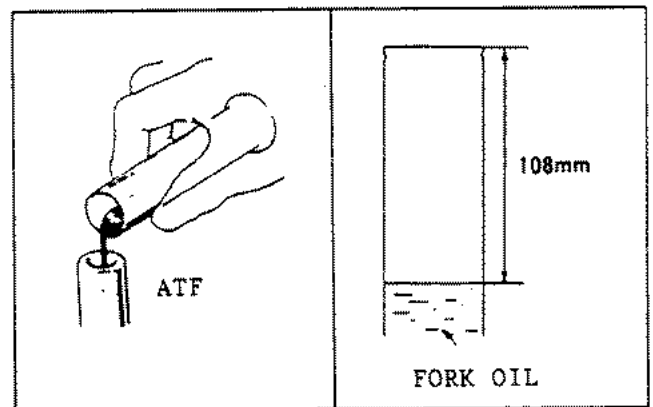

Face the small pitch end of the fork spring into the bottom and install in the front fork



Install spring seat and spacer

Replace fork bolt O ring if damaged and apply a little ATF fluid to it.

Install fork bolt into fork pipe

