



Remove brake hose crammer from bottom bridge

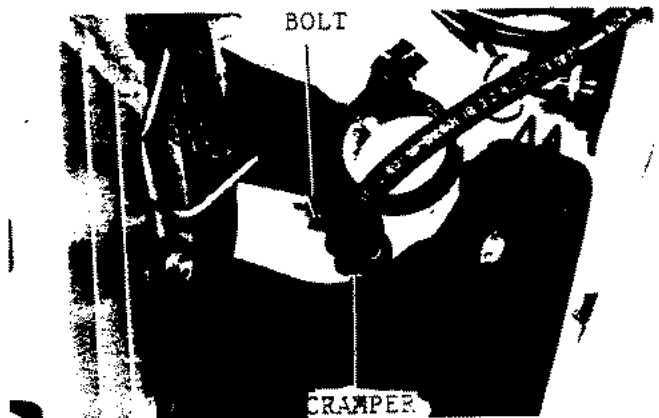

Straighten lock washer hook
Remove lock nut, lock washer

* Do not re-use lock washer

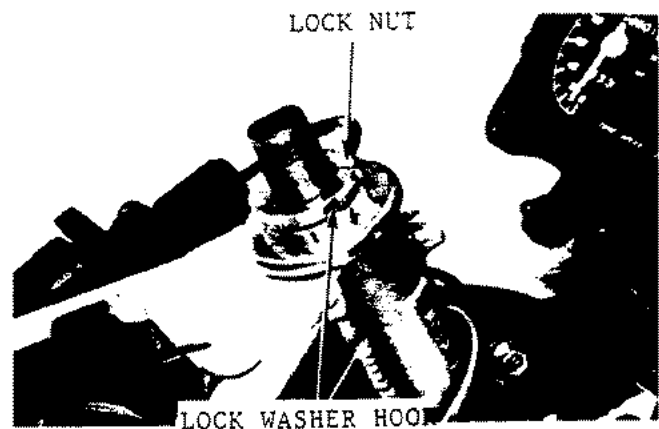

Remove steering adjuster nut
Special tool

07916-3710100 - Steering stem socket



Remove steering stem, dust seal, upper bearing inner race and upper bearings
Remove lower bearings from steering stem.

INSPECTION

Inspect upper, lower bearings for wear and damage. Inspect steering stem lower bearing inner race and dust seal for wear and damage

Inspect steering head pipe bearing outer race for wear and damage

