

BEARING REPLACEMENT

* When replacing bearings, replace bearings inner and outer races as a set

Remove lower bearing inner race

* Install stem nut inot stem and fix so that thread cannot be damaged
* Take care not to damage stem



Remove dust seal

Instr 11

Install dust seal into steering stem and pressure in inner race

Special tools:

07946-MB00000 - Steering stem driver

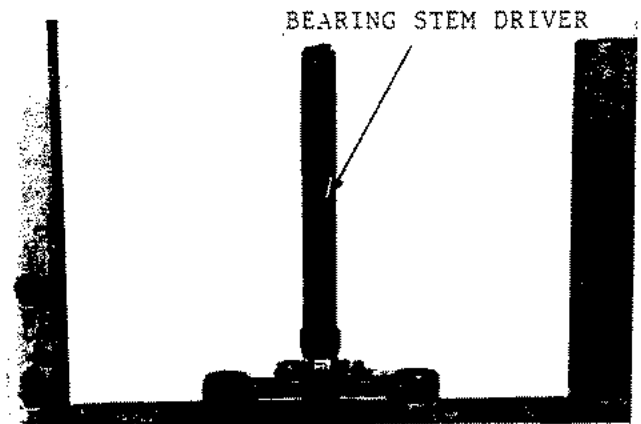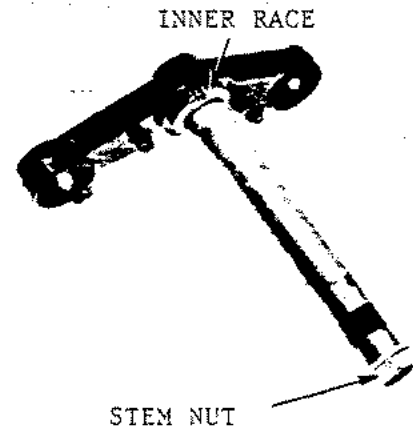

BALL RACE REPLACEMENT

Ball race remover set (1)-(6)

07946-KM90000

① Driver shaft assy (nut A,B)
07946-KM90300

② Assembly Base
07946-KM90600

③ Driver attachment A
07946-KM90100

④ Driver attachment B
07946-KM90200

⑤ Bearing remover A
07946-KM90400

⑥ Bearing remover B
07946-KM90500

Set ball race remover into head pipe as in the picture

* Align head pipe shoulder with bearing remover A and install
* Lightly tighten nut B with spanner
* Take care with assembly base direction

