

SEPARATION

Install rear cushion compressor


Standard tool:

Rear cushion compressor 07GME-0010000

Special tool:

Rear cushion compressor attachment
07959-MB10000


Pressure spring to a position where the locknut can be removed. Hold lock nut using a spanner and remove lower joint. Remove standard tool and remove seat stopper, dust sea, spring guide, lower spring seat, spring, upper spring seat and adjuster

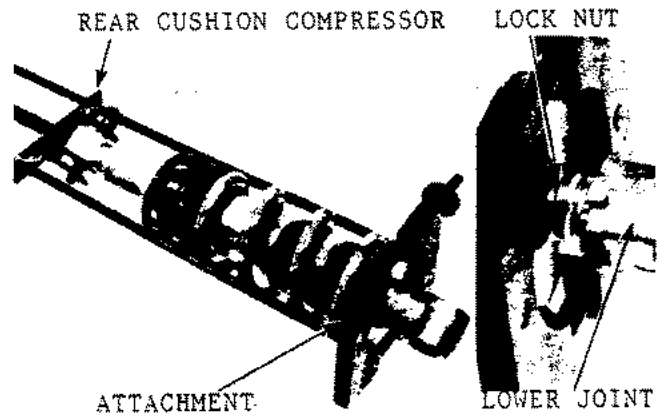


INSPECTION

Inspect rear cushion spring freeplay

Service limit : 128.7mm (replace if below)

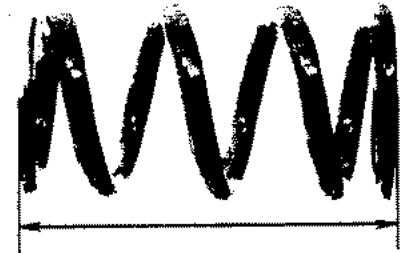

Inspect rear damper shape, oil leakages, rod warpage and damper rubber damage
Inspect rear damper for smooth movement

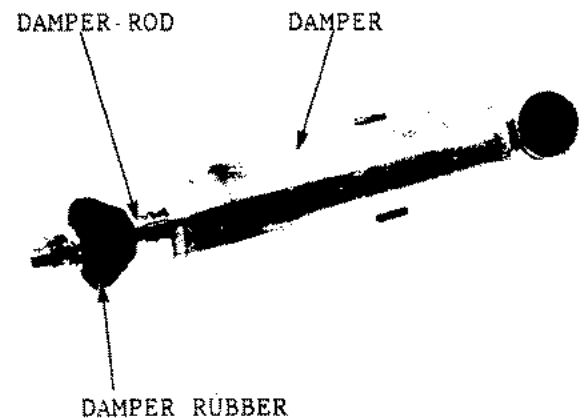

Push down rear damper and place a mark 10mm from damper base. Apply pressure, push down to mark using hydraulic press and measure force required

Damper pressure 24-26kg

If under 19.2kg then replace

