

Install distance collar

Use hydraulic press and insert R. pivot bearing (ball bearing)

Standard tool:

Outer driver (32x35mm)

Pilot (15mm)

Driver handle A

07746-0010100

07746-0040300

07749-0010000

Install circlip into groove

Apply grease to L. pivot bearing roller

Apply grease to L. pivot dust seal lip and install

Install L. pivot collar

Install chain slider

Apply grease to R. pivot dust seal lip and install

Install R. pivot collar

