


CUSHION ARM BEARING REPLACEMENT

Remove collar

If needle bearing is damaged then
replace with new one

Replace ring

Remove dust seal

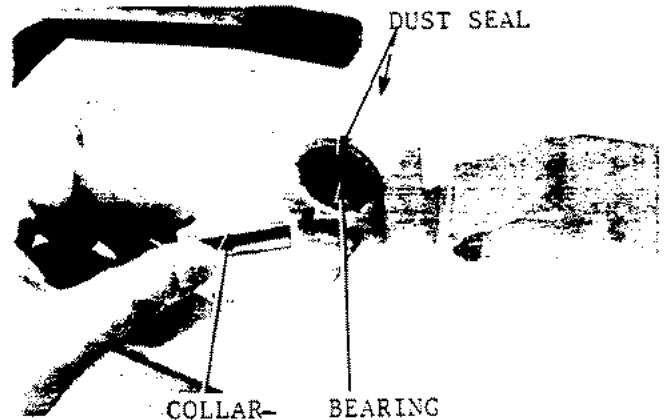


Remove needle bearing

* Take care not to damage rear fork
bearing face

Special Tool

Needle bearing remover	07GMD-KT80100
Driver shaft (B)	07964-MB00200

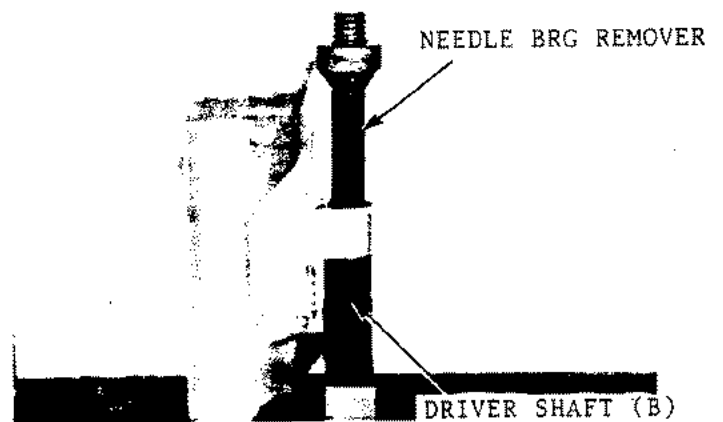


Use a hydraulic press to install new
bearing

* Insert up to bearing mark

Special tool:

Driver shaft (B)	07964-MB00200
Standard tool:	
Outer driver (24x26mm)	07746-0010700
Pilot (17mm)	07746-0040400
Driver handle A	07749-0010000

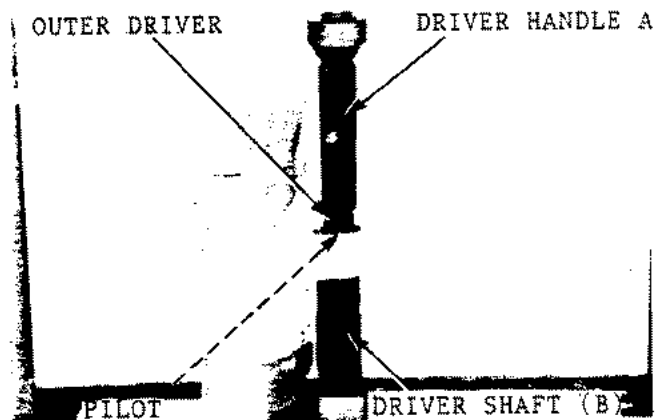

Apply grease to bearing roller

Apply grease to new dust seal lip and
install

Install collar

