


Check master cylinder brake fluid level

- * When adjusting fluid level ensure no foreign particles enter fluid
- * When removing rear reservoir cap remove R. side cover
- * Use DOT 4 brake fluid for front master cylinder and DOT 3 for rear

FRONT

REAR

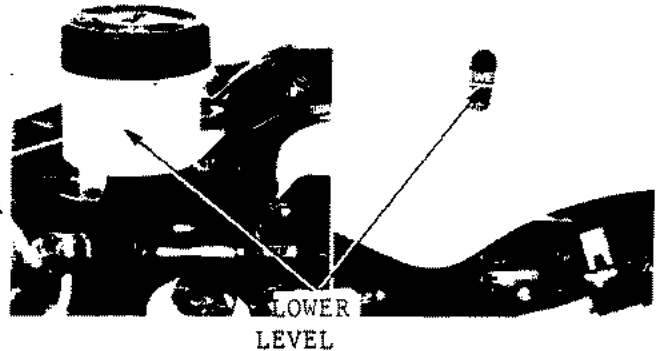

BRAKE FLUID EXTRACTION/FILLING


Front

Turn handlebars to left and remove reservoir cover with vehicle in upright position


Rear

Remove side cover and remove reservoir cover
Install bleeder valve vinyl tube

loosen caliper bleeder valve and move brake lever/pedal
Move until brake fluid does not come out of bleeder valve

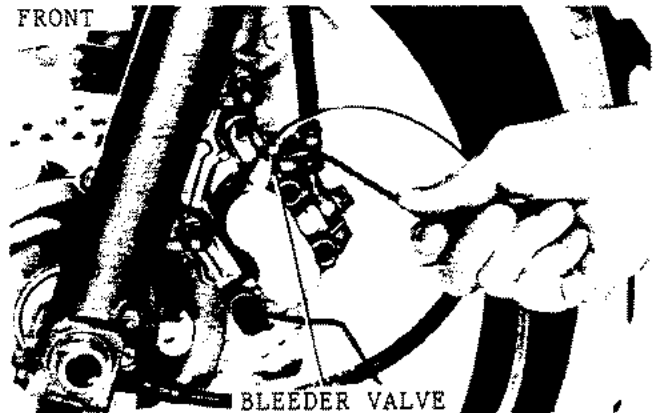

- * Brake performance will be affected by dirt on brake disc pads
- * If dirty then replace with new pads and clean brake disc

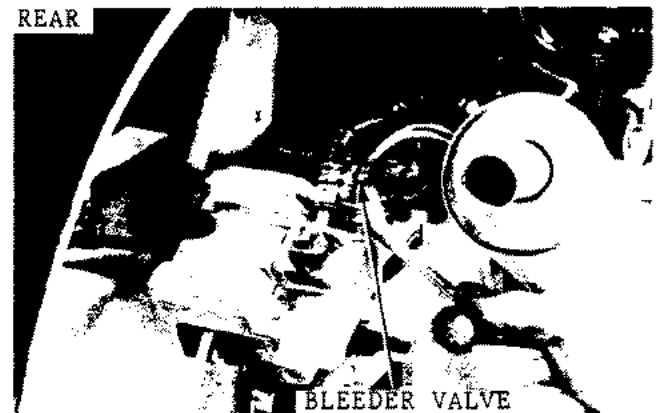

AIR BLEEDING

- 3 Take care when assessin brake fluid level
- * If fluid is nearing the lower level, then advance to the following

Tighten bleeder valve and fill brake fluid to upper level and install diaphragm

