

## Front

Move brake lever and drain air from separator. Move until air does not come from reservoir (until brake lever movement is heavy)



## Rear

Move brake lever until air does not come from reservoir. Install vinyl tube to caliper bleeder valve and drain into container

- 1] Move brake lever (brake pedal) several times and in a hold position (with push ins), turn bleeder valve roughly  $\frac{1}{2}$  turn and retighten.

\* Do not move brake lever (brake pedal) until tightening bleeder valve



- 2] Slowly move brake lever (brake pedal) and once moving safely then pump into position

1 & 2 should be carried out until all air is removed from bleeder valve

Tighten bleeder valve

Torque : 0.4-0.7 kg-m

After bleeding air, fill reservoir with brake fluid to upper mark

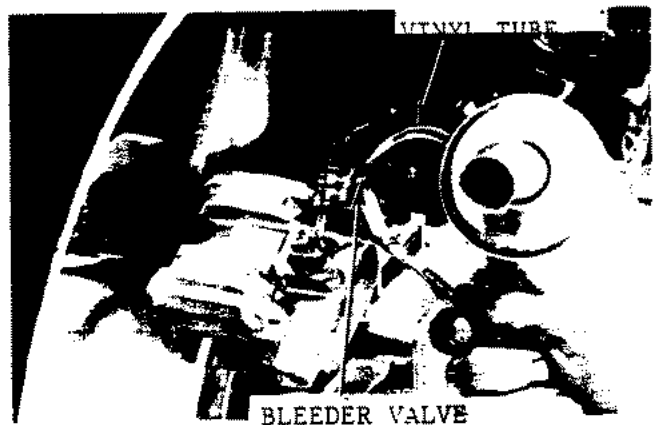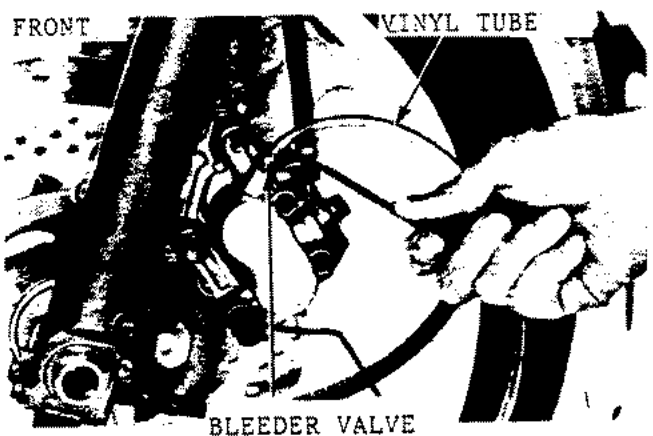

## BRAKE PADS/DISC

### Front brake Pad Replacement

\* When replacing pads do not remove brake hose.

Remove hanger pin plug and loosen hanger pin.  
Remove speedometer cable guide.  
Remove caliper bracket bolt and remove caliper bracket from front forks

