



In order to install new brake pads push to return piston position

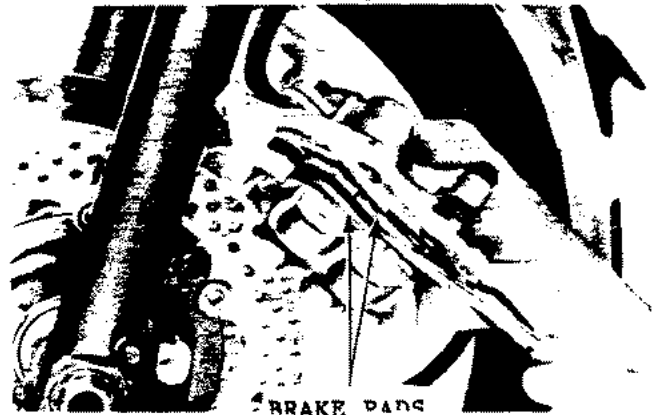


Remove hanger pin from caliper and remove brake pads

* Pull caliper bracket open to replace pads

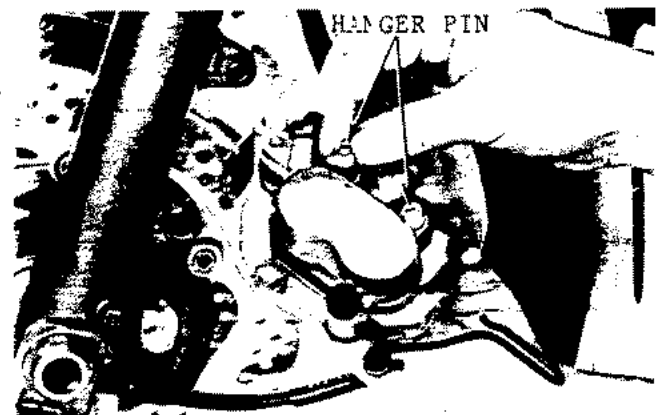

Check that pad springs are installed correctly
Apply silicon grease to caliper bracket pin

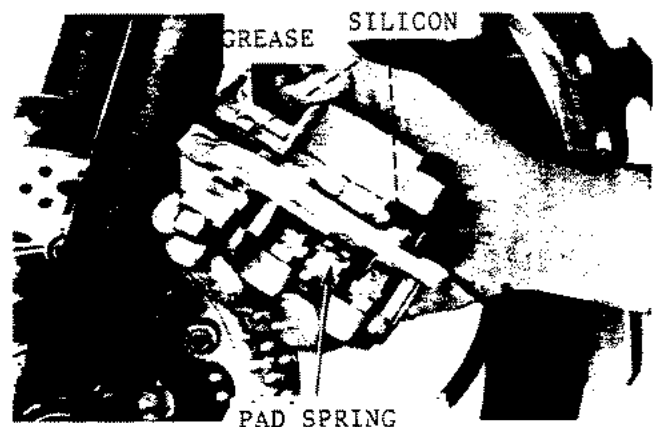

Install new pads to caliper

* Always replace brake pads as a set

Push pads, align with caliper hole and install hanger pin

