

Install caliper to front forks

\* Take care not to damage brake pads

Tighten caliper bracket bolt:

Torque: 2.4-3.0kg-m


Tighten hanger pin:

Torque: 1.5-2.0 kg-m

Install hanger pin plug

install speedometer cable guide into  
L. front brake caliper bracket

\* After replacing pads move brake  
lever to push piston in and out

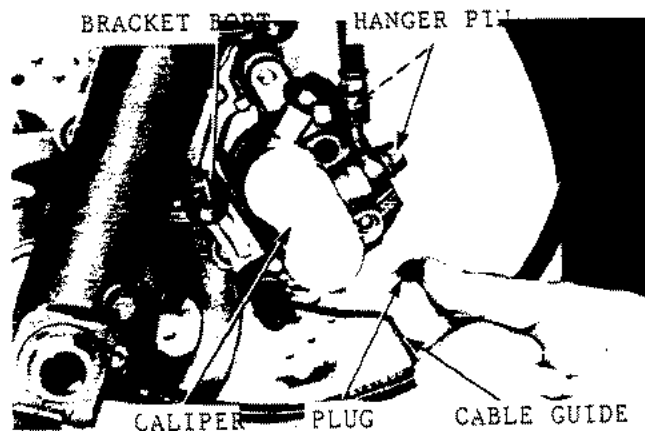

#### REAR BRAKE PAD REPLACEMENT

8 Do not remove brake hose when  
replacing pads

Remove hanger pin retainer

Remove caliper pinch bolt and remove  
caliper from rear caliper bracket

In order to install new pads push out  
caliper piston

Take hanger pin from caliper and  
remove pads



Check that pad springs are installed  
correctly

