


Separation

Remove snap ring


Special tool : snap ring pliers

07914-3230001

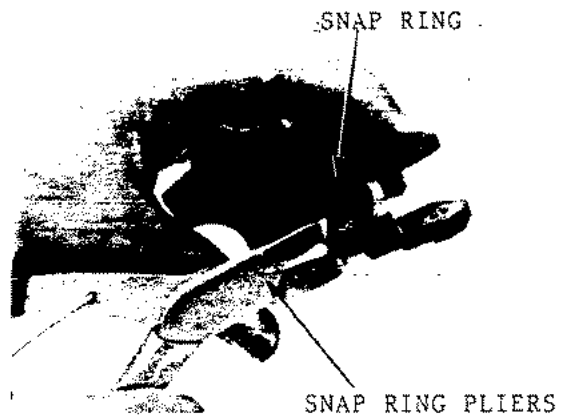

Remove piston secondary cap primary cap and spring
Clean master cylinder reservoir and master piston with brake fluid

* Clean all removed parts with brake fluid and check each part has been cleared so air can pass through
* Ensure all foreign particles have been removed from parts

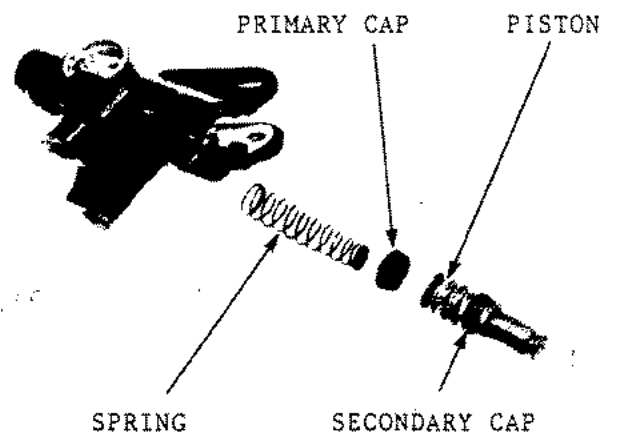


Inspection

Inspect master cylinder moving parts for damage

Measure master cylinder I.D

Service limit: 14.055 (replace if above)

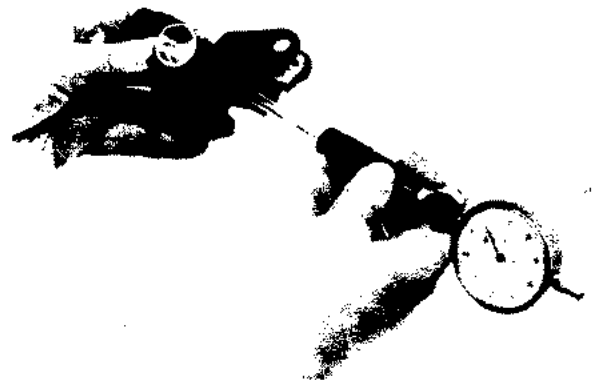

Inspect piston surface for damage and warpage

Inspect primary cap and secondary cap for damage

Measure master cylinder O.D

Service limit: 13.945mm (eplace if below)

