

## ASSEMBLY

\* Check that each part is clean before installing  
\* Replace master cylinder piston, spring cap and snap ring as a set

Apply brake fluid to piston cap and master cylinder inside

Install spring, piston cap and piston into master cylinder and hold using snap ring

Special tool: 07914-3230001  
Snap ring pliers

\* When installing primary cap, face O.D small end to the piston and install  
\* Ensure snap ring fits into groove correctly

Apply brake fluid to new O ring and install reservoir hose joint  
Install reservoir hose joint into master cylinder and hold using snap ring.  
Install rubber cap into master cylinder

Install front stop light switch  
Install boot  
Install brake lever

