

Install pad spring into caliper  
 Apply silicon grease to boot inside  
 Install boot correctly into caliper  
 and caliper bracket groove  
 install caliper bracket  
 Install brake pads.

#### INSTALLATION

install caliper into front forks

\* Take care not to damage brake pads

Tighten caliper bracket bolt  
 Torque: 2.4-3.0 kg-m

Tighten hanger pin  
 Torque: 1.5-2.0 kg-m

Install janger pin plug  
 Install 2 new sealing washers and  
 brake hose bolt and tighten brake  
 bolts  
 Torque: 2.5-3.5 kg-m

Fill with brake fluid and bleed air  
 ( 14.3)

#### REAR BRAKE CALIPER

##### Removal

Drain brake fluid ( 14.3)  
 Remove brake hose bolt and brake hose  
 Remove hanger pin retainer  
 Remove caliper pinch bolt, turn caliper  
 upwards to remove disc and remove from  
 caliper bracket  
 Remove brake pads.

\* Do not spill brake fluid onot brake  
 disc. Brake performance will be  
 affected. If dirty then replace with  
 new pads and clean disc

##### Separation

Remove pad spring, pivot collar and boot  
 from caliper  
 Inspect boot and replace if damaged.

