

15. FAIRING, EXHAUST CHAMBER, RR FENDER, SUB FRAME

MAINTENANCE INFORMATION	15-1	SUB FRAME	15-6
SIDE COVERS	15-1	EXHAUST CHAMBER	15-7
WINDSCREEN	15-2	REAR FENDER	15-8
FAIRING	15-3		

MAINTENANCE INFORMATION

Warnings

* Only adjust exhaust chamber or silencer when cold


Torques:

- Sub frame 3.5-4.5 kg-m
- Exhaust chamber pinch bolt 2.4-3.0 kg-m
- Chamber/silencer joint bolt 1.0-1.4 kg-m
- Silencer pinch bolt 2.4-3.0 kg-m
- Fairing stau (UP) 2.4-3.0 kg-m
- Seat pinch bolt 2.0-2.4 kg-m

SIDE COVERS

Removal

Remove seat pinch bolts and remove seat

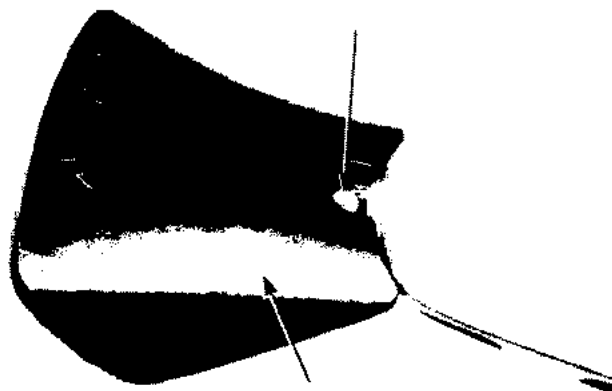

Use ignition key and remove tandem seat
Remove 2 screws

Remove seat cowl hook from side covers and
remove seat cowl

* Take care not to damage seat cowl hook

