
TROUBLESHOOTING

No Electrics (with main switch "ON")

- battery losing voltage
 - leaking
 - regulator/rectifier faulty
 - AC generator faulty
- battery cord connection cut
- fuse cut (inspect main fuse)
- main switch faulty
- coupler connection faulty or shorting

Charging System Faulty

- connector or coupler connection faulty, misrouted or showing
 - between AC Generator and regulator/rectifier (Y)
 - between regulator/rectifier & battery (R)
 - between regulator/rectifier & earth (G)
- regulator/rectifier faulty
- AC generator faulty

Voltage Low

- battery charging faulty or losing charge
- regulator/rectifier faulty
- AC generator faulty

Electric Current Faulty

- battery cord connector faulty
- charging system connection faulty
- ignition system connection faulty or showing