

* Install connector correctly to primary terminal

Rear Coil = green-green wire
black-black/yellow wire

Front coil = green-green wire
black-black/blue wire

Install plug cap to new ignition coil and install coil to stay.

Install plug cap to plug

Ignition coil (rear)

Install fuel tank (4.2)

Ignition coil (front)

Install R. Lower fairing (15.5)

PULSE GENERATOR

Inspection

Remove side cover (15.1)



Remove pulse generator coupler and measure resistance W/Y-Y (rear pulse generator coil)

and W/Bu-Bu (front pulse generator coil)

Standard + 180-220 ohms (20°C)

Replace pulse generator (10.2)

IGNITION COIL (FRONT)

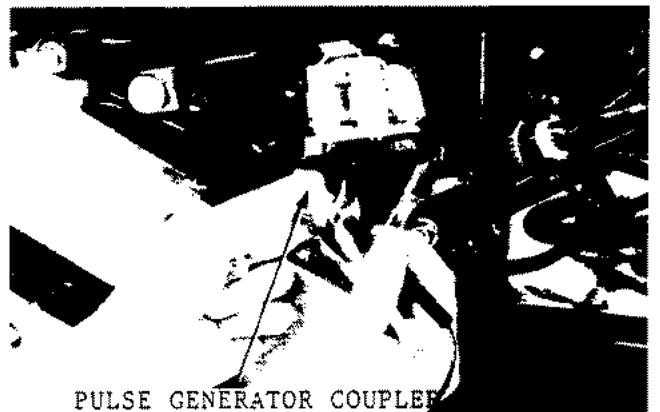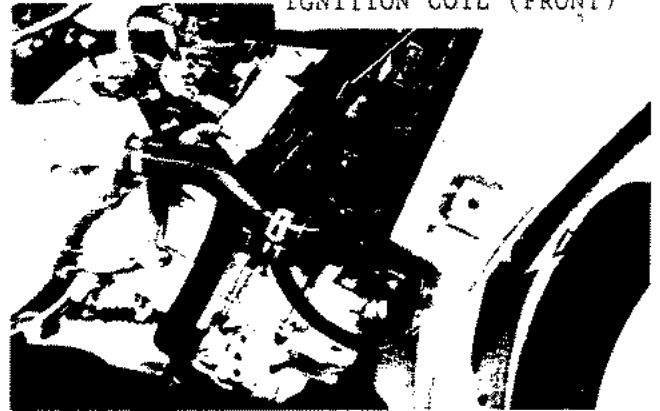

PULSE GENERATOR COUPLER