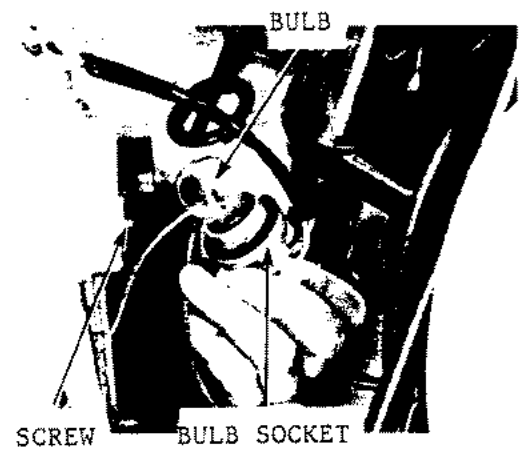
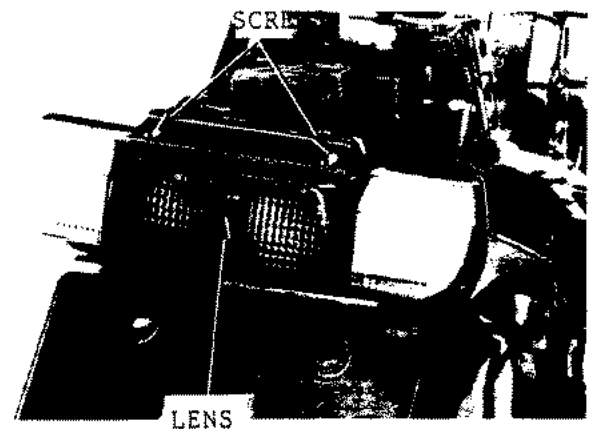

WINKERS

Turn bulb socket, separate bulb socket lock and remove bulb socket and bulb from winker
If necessary remove screws and replace winker lens.
Install new bulb in bulb socket and install in reverse procedure to removal

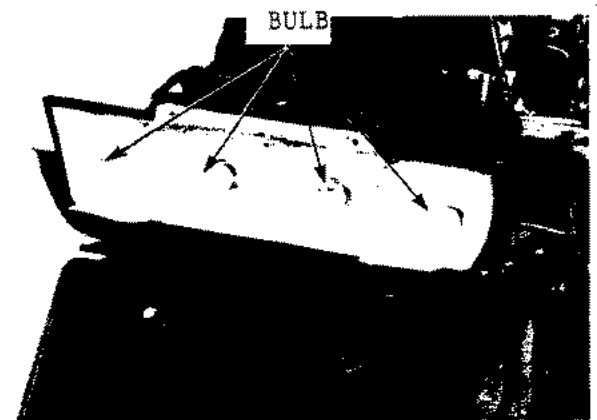


BRAKE/TAILLIGHT

Remove side covers (15.1)
Remove brake/tailight lens



Replace bulb
install lens
Install side covers (15.2)



METERS

Removal
Remove meter coupler and connector

