


## NEUTRAL SWITCH

Remove fuel tank ( 4.2)  
Remove neutral switch connector and  
inspect between Lg/R wire and earth for  
current

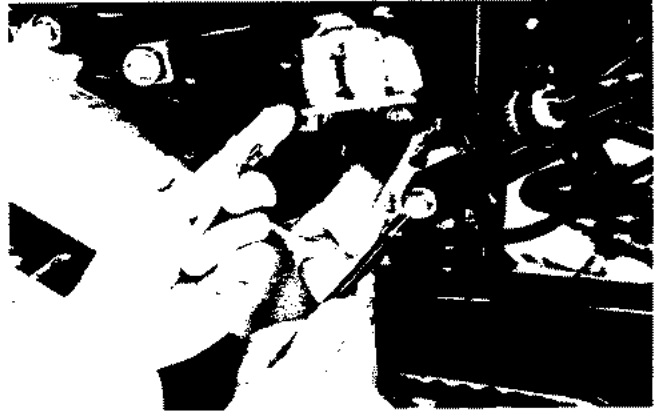


## BRAKE LIGHT SWITCH

Front

Remove brake light switch connector  
Without moving brake lever inspect for  
current


Pulling lever - current  
Not Pulling Lever - No current

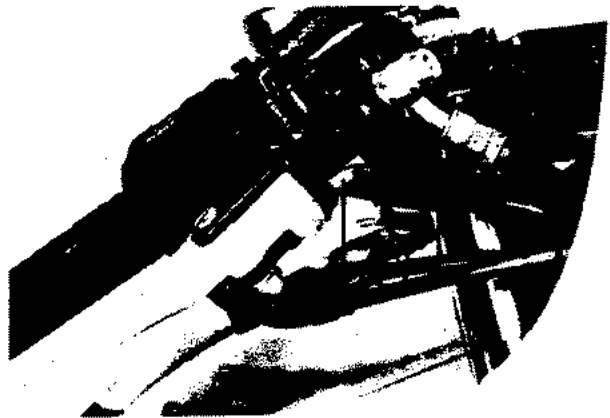

Rear

remove seat and remove rear brake light  
switch coupler. Without moving brake  
pedal inspect for current

Pushing Pedal - current  
Not Pushing Pedal - No current

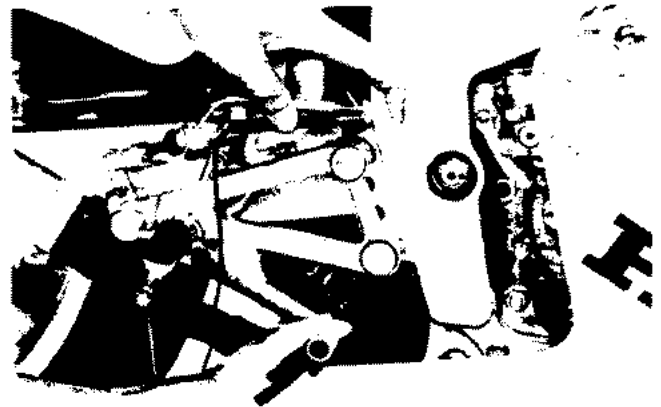

## HORN

Remove wire from horn  
Connect 12V battery to horn and if  
noise then okay

