


Connect control cable to servo motor pulley
 Connect control cable to cylinder pulley
 Adjust control cable (2.17)
 Install fuel tank (4.2)
 Install R lower fairing (15.5)

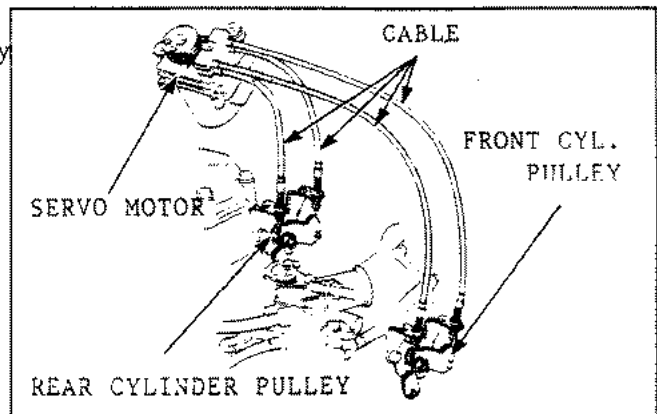


OIL PUMP SOLENOID

Inspection:

Remove fuel tank (4.2)
 Remove R lower fairing (15.3)

Remove oil pump solenoid coupler connection

Measure resistance at coupler
 Br/Bu-Peach box - std (20°C) = 3.0-5.0 ohm

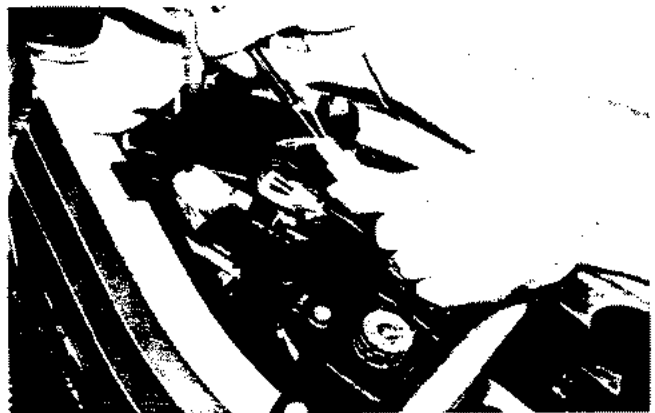


Connect solenoid coupler Br/Bu box to positive and peach box to negative of 12 volt battery

* Do not shorth battery
 * Do not connect battery for more then one minute

If there is no "clunk" sound from solenoid then replace oil pump assy

Oil pump replacement (3.3)

If there is a sound then advance to next inspection

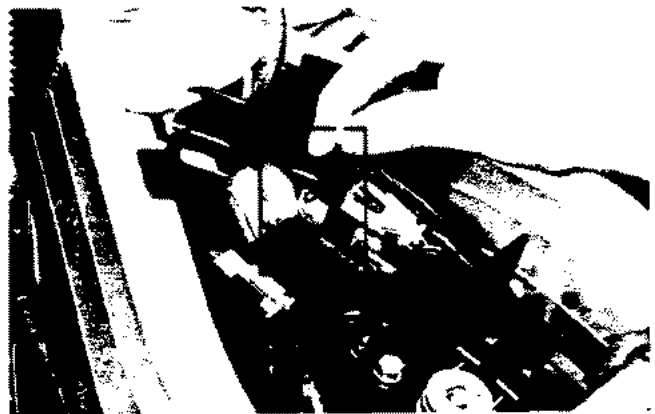

Turn main switch "ON"
 Measure voltage between solenoid harness coupler (2P mini,W) earth Br/Bu box

Battery voltage (above 10V) - inspect wire harness

No battery voltage (under 10V) - battery charging faulty, wire harness, coupler short, connection faulty, fuse faulty

