


FRONT BRAKE

Lever travel 10-20mm

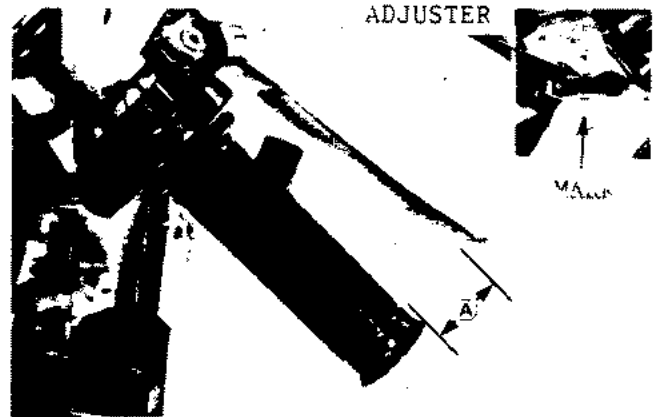


FRONT BRAKE PAD

Pad Wear

Inspect pad wear using the usage marks

* Replace brake pads as a set

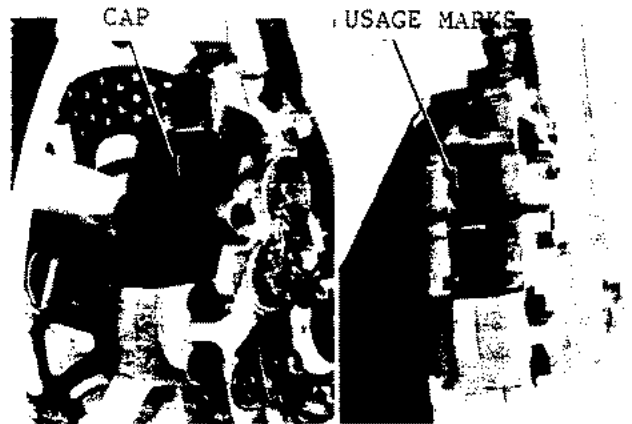


REAR BRAKE PAD

Pad Wear

Inspect pad wear using the usage marks

* Replace brake pads as a set

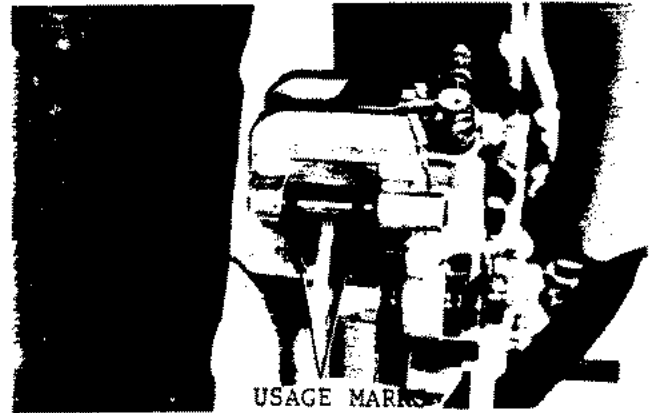

FRONT FORK

Spring preload adjustments

* Ensure spring preload settings are even between left and right forks

