


SIDE STAND

Because of the weight of the frame and raising the bike using the side stand the stand may bend.


With 2.0-3.0 Kg pressure the stand will raise when pushing the rubber

If the rubber is worn or damaged replace

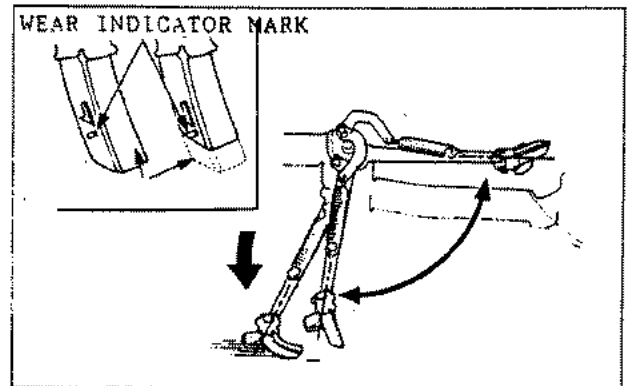

LUBRICATING POINTS

Indicated in diagram

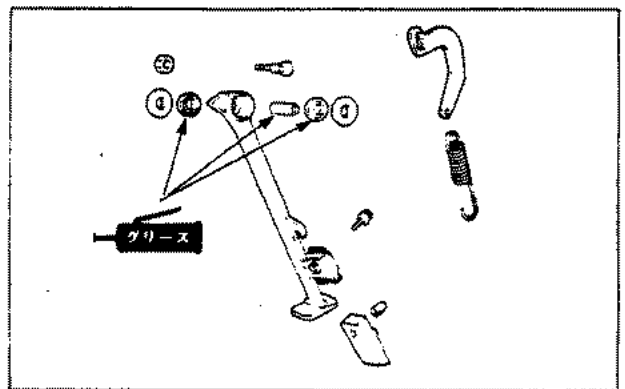

RC VALVE CONTROL CABLE ADJUSTMENT

* If the control cable connection is removed or the control cable is loose, then replace the control cable

- Remove R. lower fairing (15.3)
- Remove fuel tank (4-2)
- Remove control cable connection from cylinder pulley
- Connect fuel tube to fuel cock and start engine
- Slowly raise engine revolutions and check that at roughly 2000rpm the servo motor pulley protuberance stops at the "HI" mark position and stop the engine with the OFF switch

