

## NSR250R(J)

Fully open the pulley on the cylinder side and fix there with the knock pin or something suitable

\* Check that the pulley is okay when it is in the fixed position

\* it is easier to perform if the knock pin (94303-06100) is used

Connect control cable to the cylinder pulley.

Adjust the adjuster nut so that the pulley which pulls up cable has freeplay of under 0.5mm

\* Always tighten the adjuster nut by hand

Start engine and slowly increase revolutions to around 2000rpm and check that the pulley moves clockwise to a stop, and increase the revolutions to around 3000rpm where it should move anti clockwise to a stop

### AIR CLEANER CASE

remove air cleaner drain tube

Remove air cleaner case bolt

Loosen connecting tube band and remove air cleaner

### CARBURETTOR

Remove as per section 4

