



NSR250R(J)

Torque engine hanger bolts to recommended torque

refer section 6

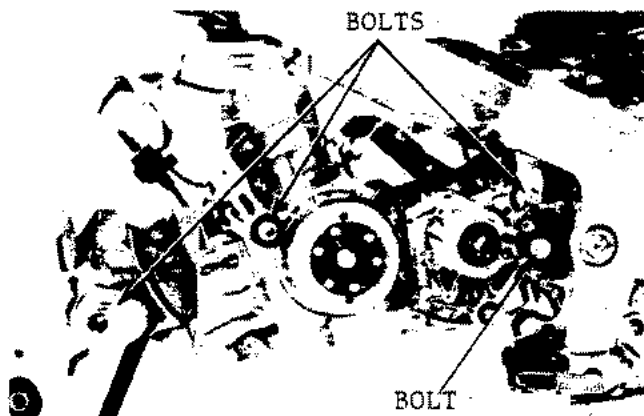


Align the drive pegs with the slots of the speedo drive box

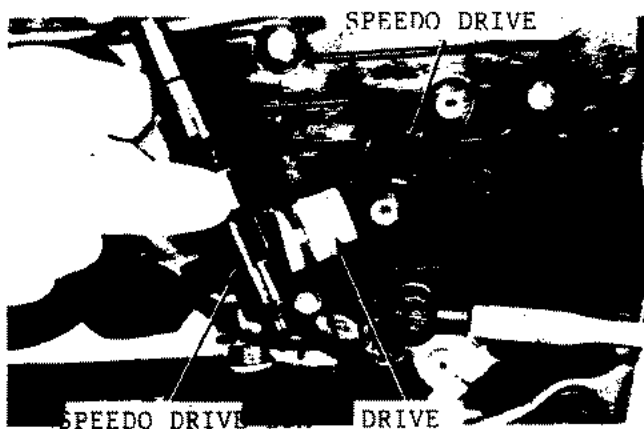

OIL STRAINER

Remove the oil strainer retaining bolts and plate

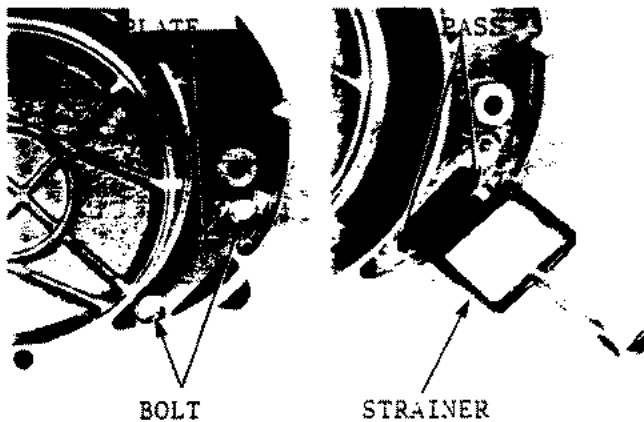

Blow out all recesses etc with compressed air

