


TRANSMISSION


Bearing removal

Remove bearing retainer, before removing bearing

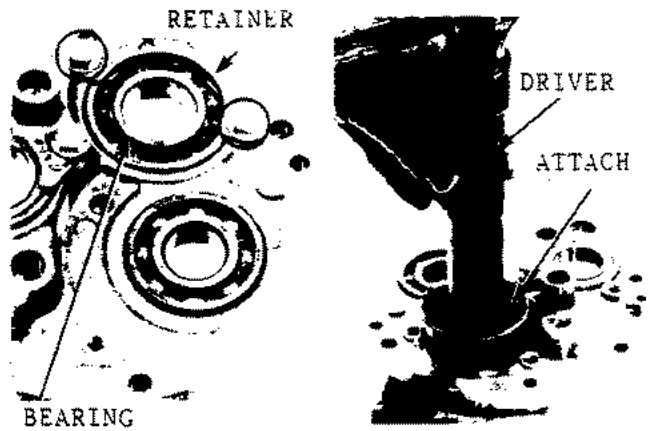


ASSEMBLY

Use a suitable bearing holder to assemble the mainshaft and countershaft to outer cover

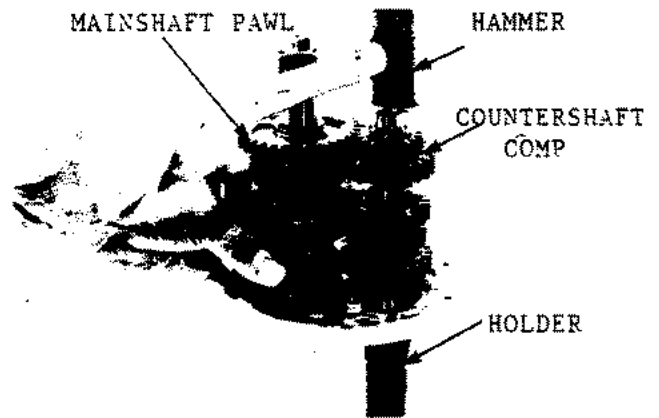

ACC/SPROCKET COVER

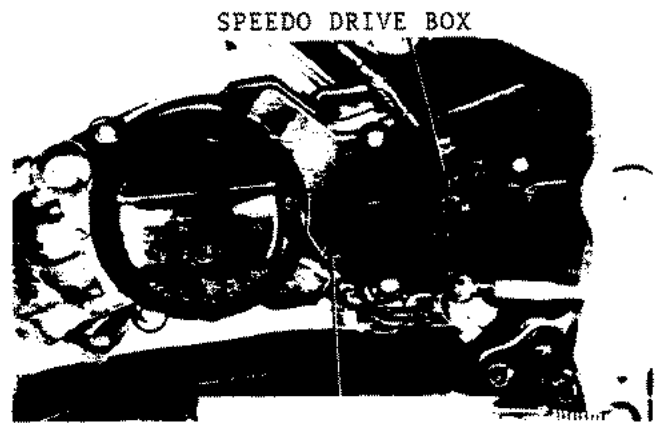

SPEEDO DRIVE BOX

