



When routing the front brake hose fit the clamp and then check for free steering operation left to right

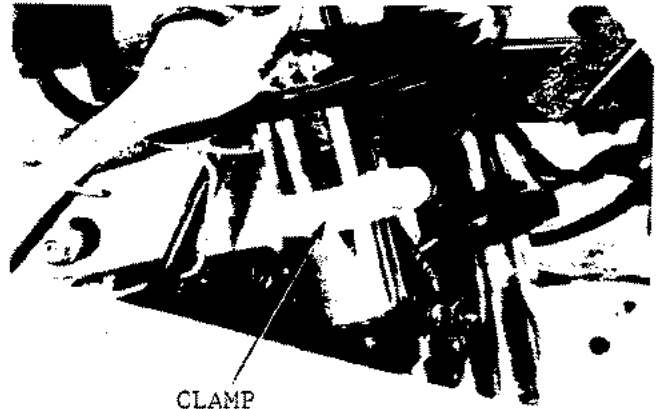


Spring preload adjuster assembly

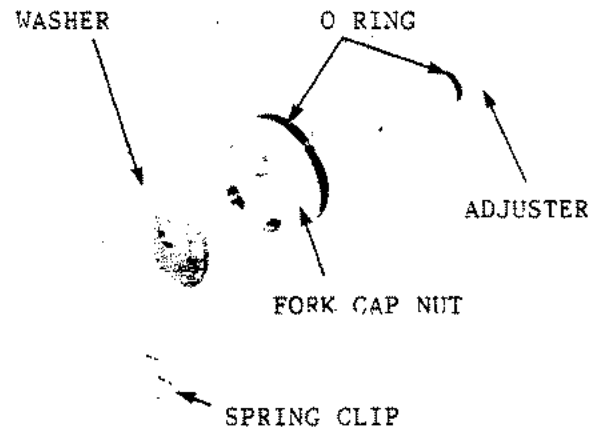

Rear Wheel/Bearing

Whenever replacing the rear wheel bearings ensure that the sprocket spacer is attached before fitting the sprocket

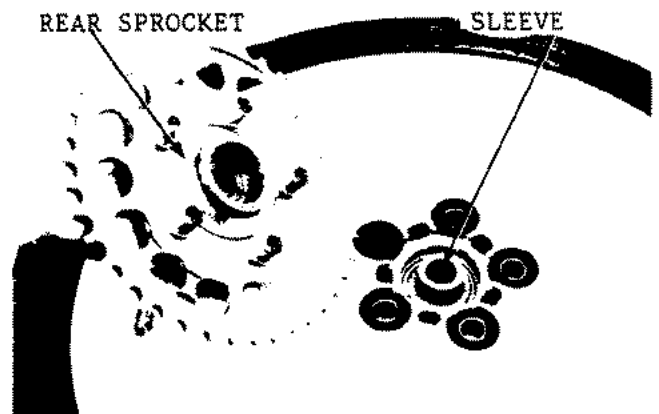

Rear wheel Bearings

