



NSR250R(J)


FRONT BRAKE INSPECTION

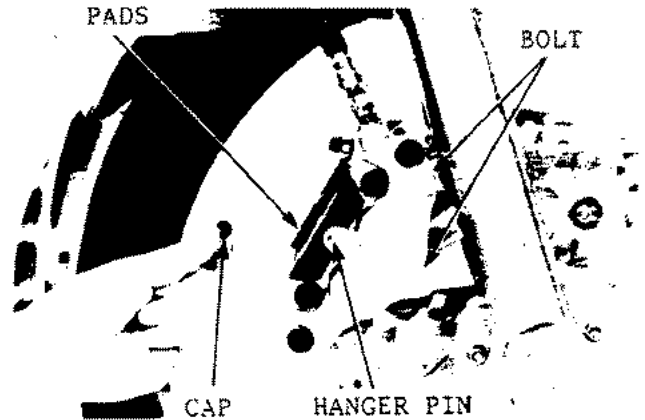

In order to install new brake pads return pistons to original position

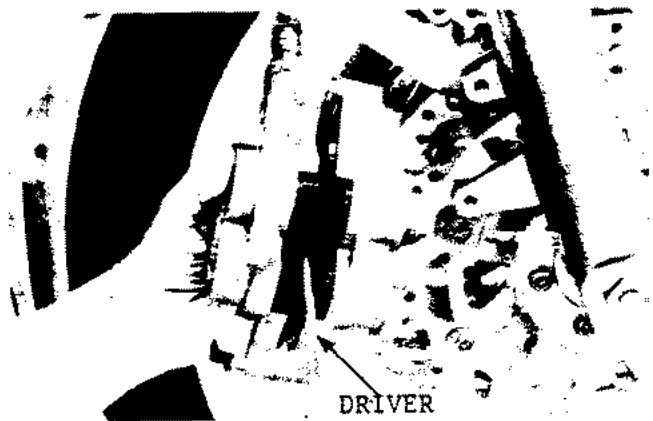

Remove hanger pin to remove brake pads

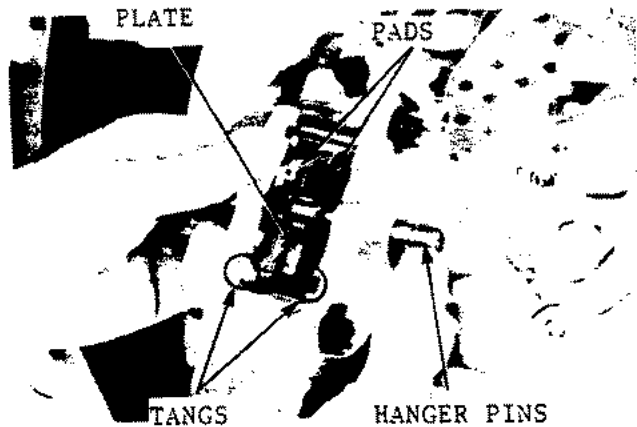

* Always replace brake pads as a set

After replacing brake pads pump brake lever to push pads back into disk

