

REAR BRAKE CALIPER BRACKET REMOVAL

* Be careful not to spill fluid on brake discs or pads. Brake performance would be affected. If removing, replace pads and check disc

* Brake caliper bracket can be removed without disconnecting brake hose

Removal

Remove torque rod caliper bracket pinch bolt (22.32)

Remove caliper bolt and remove caliper bracket (20.56)

* Suspend brake caliper so as not to pinch hose

Remove rear wheel (13.3)

Remove caliper bracket

Remove collar from bracket and inspect for damage

Inspect for damage to dust seal, warpage and damage to bush

If the bush is worn then replace bracket as an assembly

Installation

* Apply molybdenum grease to dust seal lip and bush inner

Install collar to bracket

Install caliper bracket and rear wheel (13.7)

Install caliper to bracket (20.56)

Install torque rod (22.32)

Torques:

Rear axle nut	8.5-10.5 Kg.m
Torque rod pinch bolt/nut	3.0-4.0 Kg.m

torque rod bolt/NUT

