

## NSR250R(K) 追補

### SILENCER REPLACEMENT



Remove silencer pinch bolt  
Remove 3 silencer joint bolts and  
heat guard and remove silencer from  
exhaust chamber

Install new gasket to silencer  
Install heat guard and silencer joint  
bolt and tighten bolt

Install silencer pinch bolt

Torque: Silencer joint bolt 1.0-1.4 Kg.m  
Silencer pinch bolt 1.8-2.5 Kg.m

\* The heat guard installed silencer  
joint bolt is larger than the other 2  
bolts

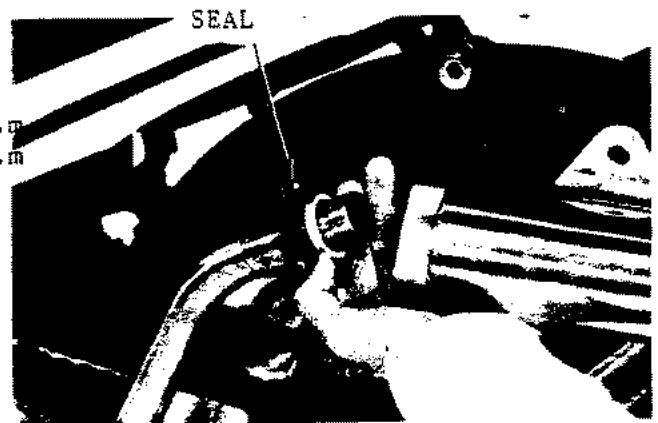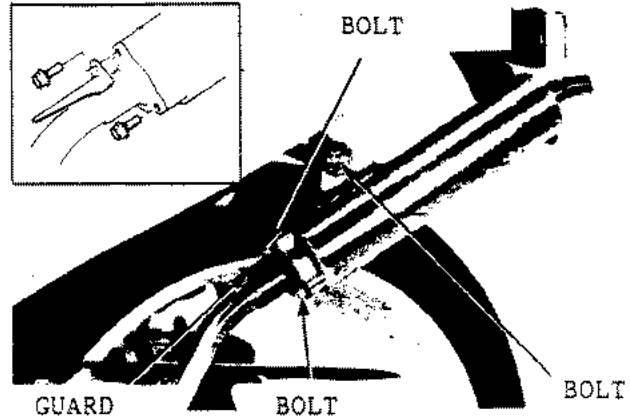

### BATTERY/CHARGING SYSTEM

Battery Removal

Remove battery (-) terminal cable

Open battery cover

Remove (+) cable from (+) terminal

Remove battery

Install and reverse removal process

\* After installing battery, apply a  
small amount of grease.

