

Frame/Body Panels/Exhaust System

Front Inner Cover

Remove the floor board (page 2-5).

Remove the front cover (page 2-5).


Remove the four tapping screws attaching the inner cover to the front fender.

Remove the screw attaching the inner cover to the frame. Pull the upper portion of the cover back out of the frame. Slide the cover upward along the frame and remove it.

Remove the six tapping screws and separate the upper and lower inner covers.

NOTE

- When installing, align the bosses of the inner cover with the holes in the frame properly.

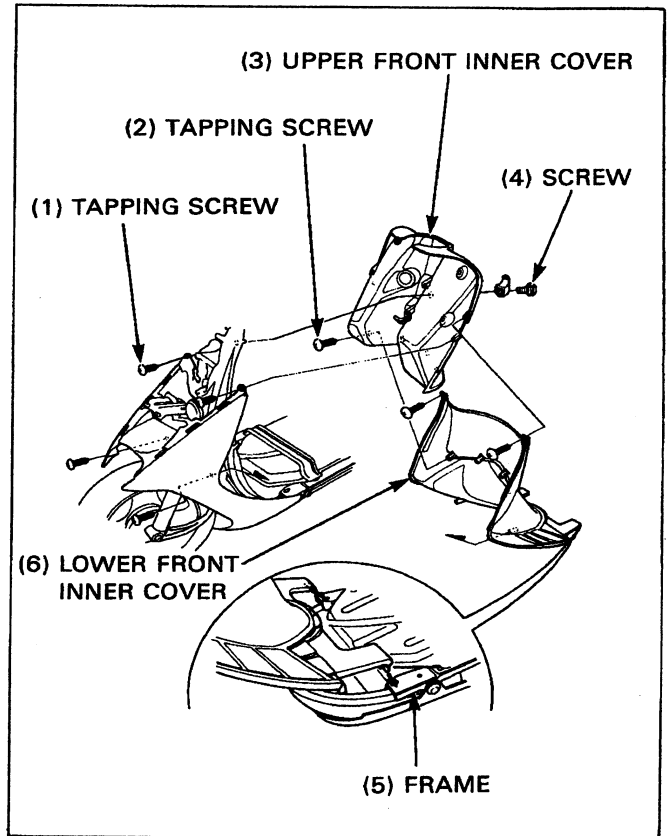

Rear Fender

Remove the oil tank (page 4-4).

Remove the ignition coil (page 14-6).

Remove the CDI unit, starter relay switch and fuse holder from the rear fender.

Remove the rear fender from the frame.

