
Carburetor Removal/Installation

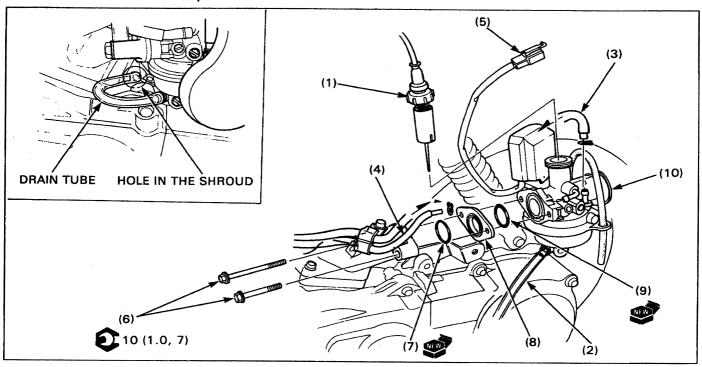

Requisite Service

Center cover removal/installation (page 2-4)

· Air cleaner case removal/installation (page 5-7)

| Procedure | | Q'ty | Remarks |
|-----------|-------------------------------|------|--|
| | Removal Order | | Installation is in the reverse order of removal. |
| (1) | Carburetor top/throttle valve | 1 | Disassembly/assembly (page 5-4) |
| (2) | Drain tube | 1 | Disconnect from the carburetor. NOTE |
| | | | When installing, insert the other end of the tube into the hole in the shroud. |
| (3) | Fuel line | 1 | |
| (4) | Oil outlet tube | 1 | NOTE |
| | | | Bleed air from the tube when installing. |
| (5) | Auto bystarter wire connector | 1 1 | |
| (6) | Carburetor mounting bolt | 2 | · |
| (7) | O-ring | 1 | |
| (8) | Insulator | 1 | |
| (9) | O-ring | 1 | · |
| (10) | Carburetor | 1 | Disassembly/assembly (page 5-5) |