


Fuel Pump Removal/Installation

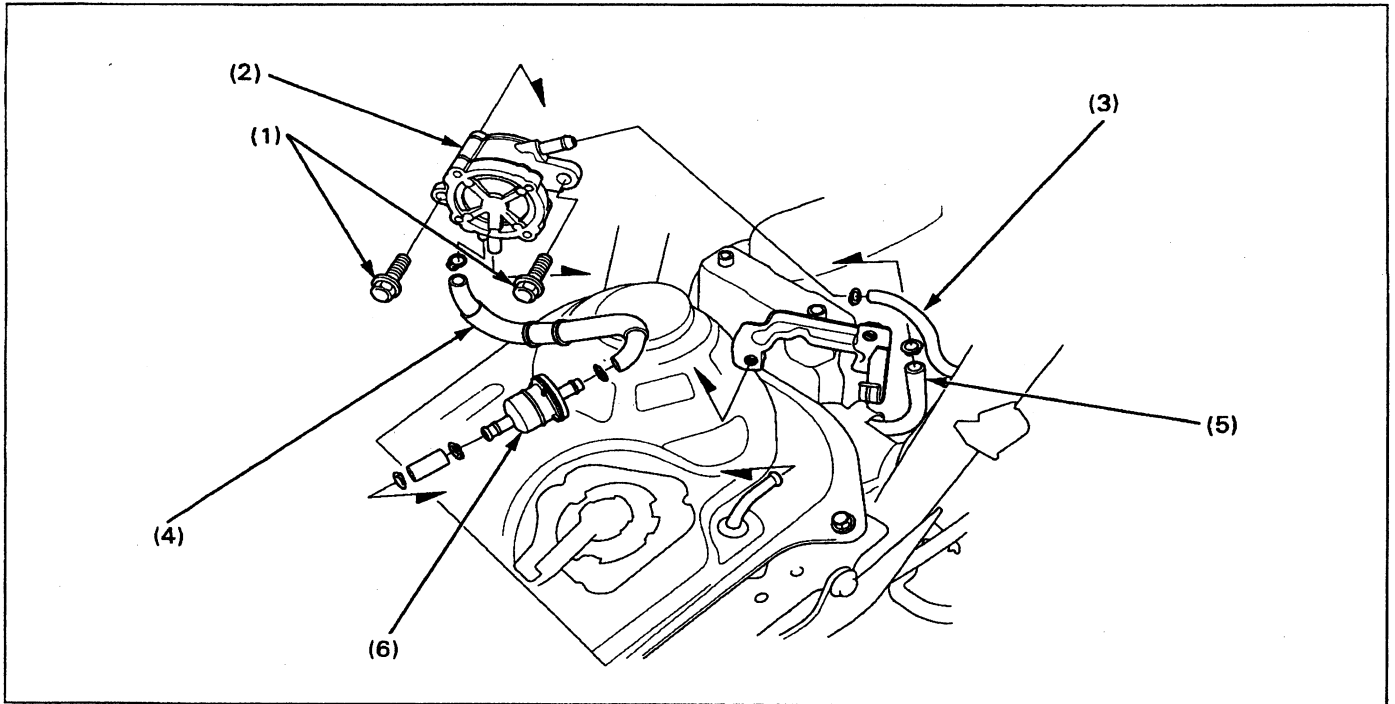

NOTE

- Do not attempt to disassemble the fuel pump.
- After installing the fuel pump, bleed air from the fuel lines and pump.

Requisite Service

- Floor board removal/installation (page 2-5)

Procedure		Q'ty	Remarks
Removal Order			Installation is in the reverse order of removal.
(1)	Bolt	2	Inspection (page 5-9) Air bleeding (page 5-9)
(2)	Fuel pump	1	
(3)	Fuel line (discharge side)	1	
(4)	Fuel line (suction side)	1	
(5)	Vacuum tube	1	
(6)	Fuel filter	1	NOTE • When installing, do not connect the vacuum tube to the fuel suction pipe of the pump.