
Final Reduction Disassembly/Assembly

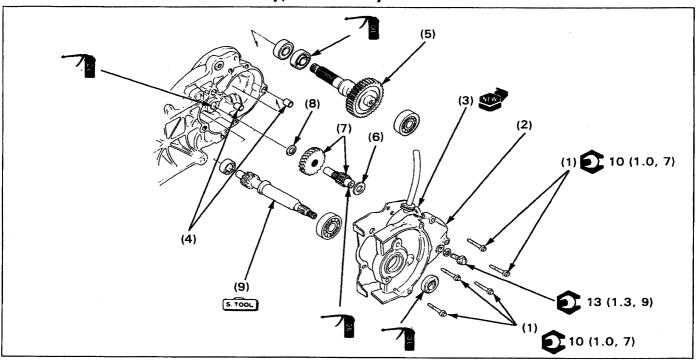

Requisite Service

- Rear wheel removal/installation (page 12-2)
- · Air cleaner case removal/installation (page 5-7)
- Clutch/driven pulley removal/installation (page 8-5)

| Procedure | | Q'ty | Remarks |
|--|---|-----------------------------------|--|
| (1) (2) (3) (4) (5) (6) (7) (8) | Disassembly Order 6 mm bolt Transmisson cover Gasket Dowel pin Final gear shaft Thrust washer Countershaft/gear Thrust washer | 5 1 1 2 1 1 1/1 | Assembly is in the reverse order of disassembly. |
| (9) | Driveshaft | 1 | Replacement (page 9-3) |