


## Starter Motor Removal/Installation

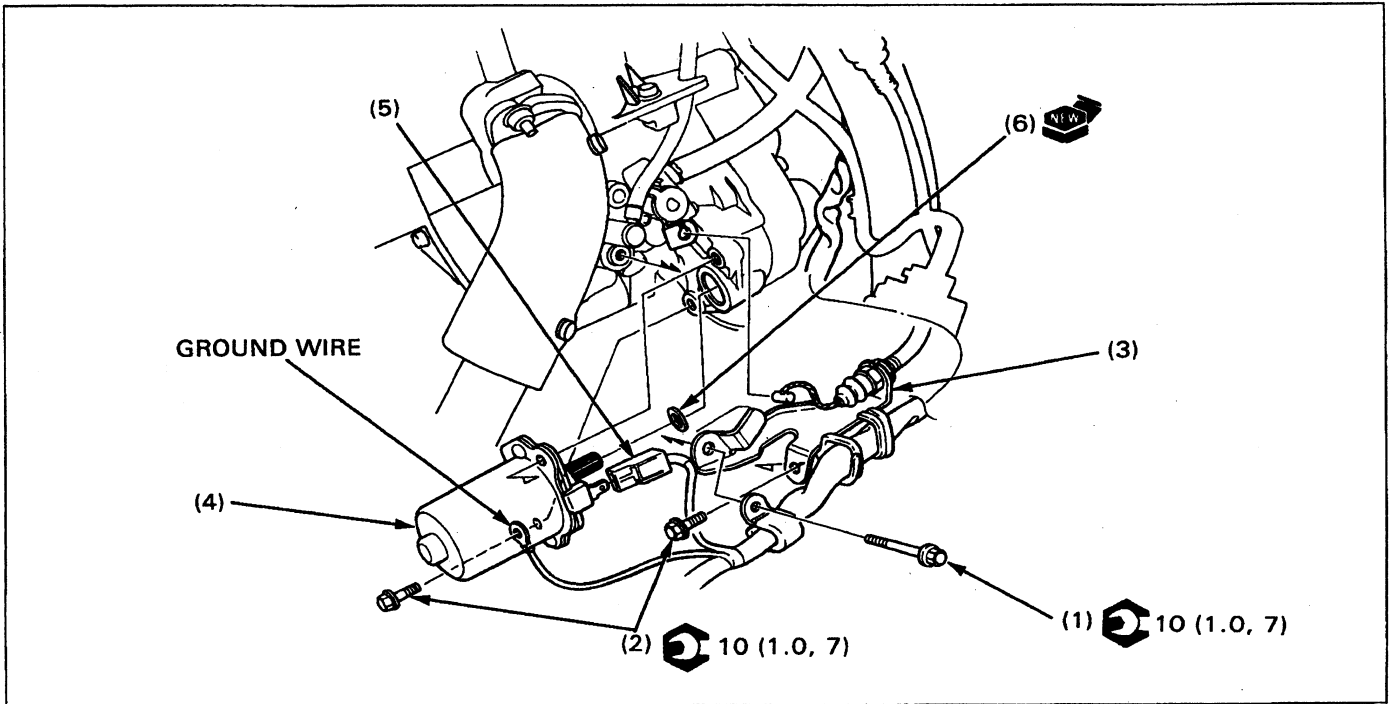

### Requisite Service

- Frame body cover removal/installation (page 2-3)

Procedure		Q'ty	Remarks
<b>Removal Order</b>			Installation is in the reverse order of removal.
(1)	Oil pump mounting bolt	1	When installing, do not forget to install the ground wire with the lower mounting bolt. <b>NOTE</b> • Do not loosen the oil pump control cable lock nut and adjusting nut. If they are loosened, perform the oil pump control cable adjustment (page 3-6) Disassembly/assembly (page 15-5)
(2)	Starter motor mounting bolt	2	
(3)	Oil pump control cable stay	1	
(4)	Starter motor	1	
(5)	Starter motor wire connector	1	
(6)	O-ring	1	