


LUBRICATION


RELIEF VALVE CHECK

Remove the relief valve from the oil pump. Make sure the O-ring is in good condition.

Remove the relief valve snap ring and disassemble the relief valve.

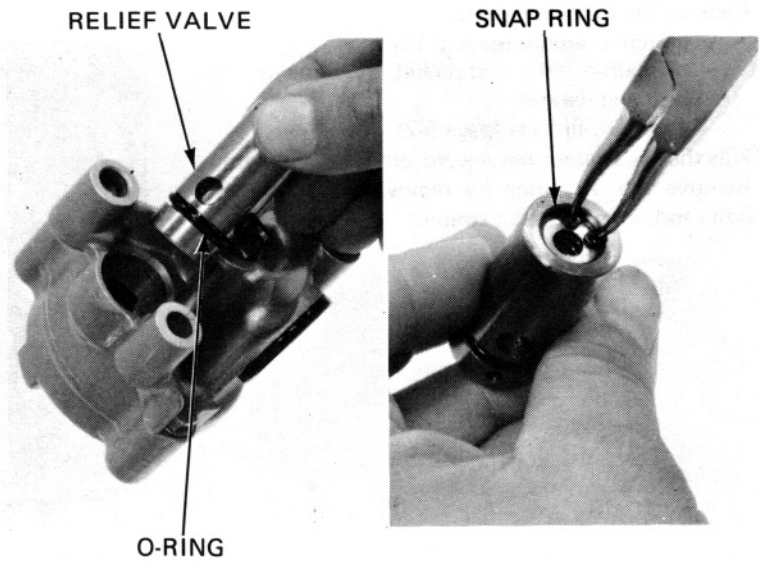

Check the spring and piston for wear or damage. Check the valve for clogging or damage. Assemble the parts in the reverse order of disassembly. Be sure to use new O-rings.

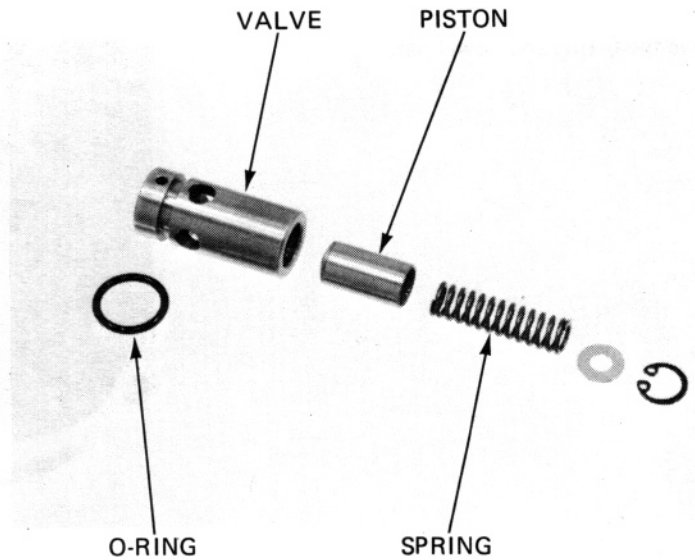

OIL PUMP DISASSEMBLY

Remove the oil pump body cover and remove the dowel pin.

