


## LUBRICATION

---

Install the gear shift linkage and clutch assembly (pages 7-17 and 9-4).

Install the dowel pins and a new gasket.

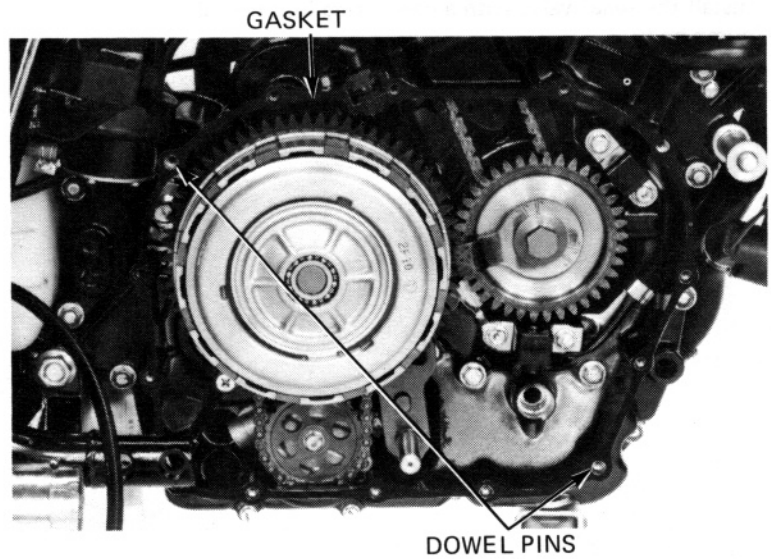

Install the following parts:

- right side cover.
- right sub-frame.
- front cylinder exhaust pipe.
- right foot peg with the rear brake pedal.

Fill the engine with the recommended oil (page 2-3).

