


MAINTENANCE

FUEL LINES

Check the fuel lines for deterioration, damage, or leakage.

Replace if necessary.

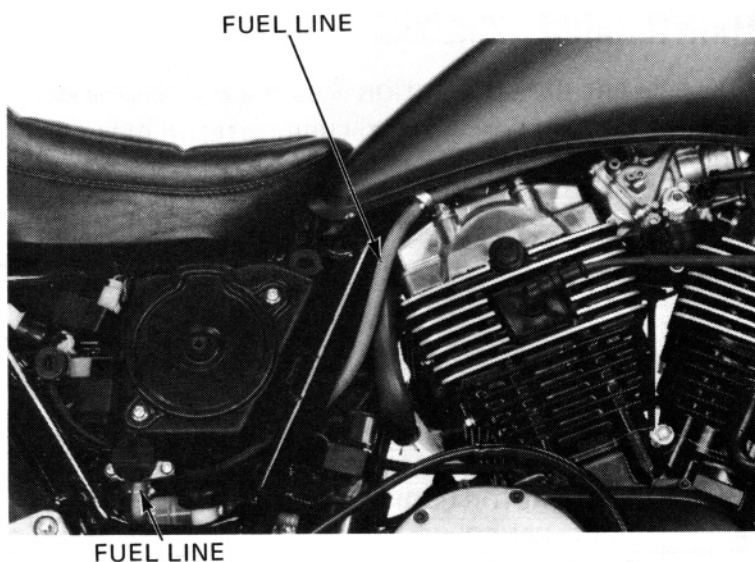

FUEL FILTER

Turn the fuel valve OFF.
Remove the right side cover, radiator reserve tank cap and pull out the fuel filter.
Clamp the fuel line between the fuel filter and fuel pump shut.

Disconnect the fuel lines from the filter.

Replace the fuel filter with a new one when indicated by the maintenance schedule. (See page 3-3).

WARNING

Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in your working area.

Install the removed parts and remove the clip.

After installing, turn the fuel valve ON and check that there are no fuel leaks.

