


MAINTENANCE

BRAKE LIGHT SWITCH

NOTE:


- Perform rear brake light switch adjustment after adjusting the brake pedal play and height.
- The front brake light switch does not require adjustment.

Adjust the brake light switch so that the brake light will come on when the brake pedal is depressed 20 mm (3/4 in), and brake engagement begins. Holding the switch body and turning the adjusting nut. Do not turn the switch body.

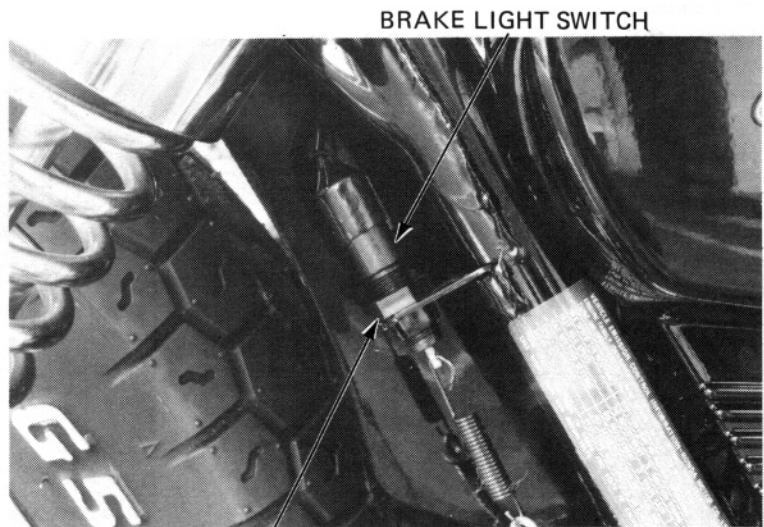


ADJUSTING NUT

ADJUSTING SCREW

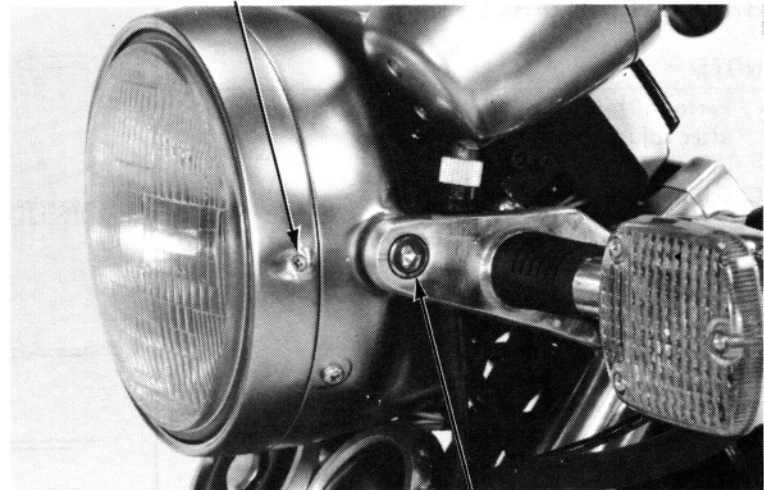

MOUNTING BOLT

CLUTCH
RESERVOIR CAP

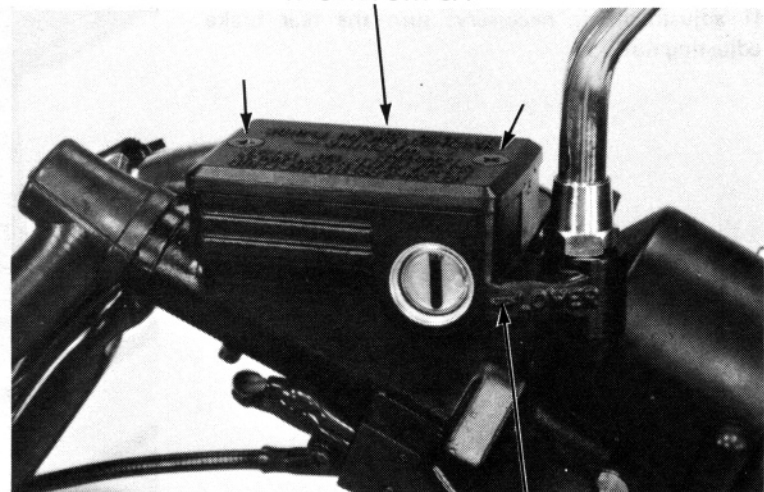

"LOWER" LEVEL MARK

HEADLIGHT AIM

Adjust vertically by loosening both headlight case mounting bolts.

Adjust horizontally by turning the adjusting screw on the headlight rim. Turn the adjusting screw clockwise to direct the beam toward the right side of the rider.

NOTE:

Adjust the headlight beam as specified by local laws and regulations.

WARNING

An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.

CLUTCH

Check the clutch fluid level.

If the level is under the lower level mark, check the clutch system for leak.

Remove the reservoir cap mount screws and cap.

Fill the reservoir with DOT-3 BRAKE FLUID upper the lower level mark.

CAUTION:

- Do not remove the cover until the handlebar has been turned so that the reservoir is level.
- Avoid operating the clutch lever with the cap removed. Fluid will squirt out if the lever is pulled.
- Do not mix different types of fluid, as they are not compatible with each other.