

FUEL PUMP

Remove the frame right side cover.


Disconnect the fuel pump wire coupler.

Turn the fuel valve OFF.

Detach the fuel inlet and outlet lines from the fuel pump.

Remove the fuel pump from its rubber mount.

Install the fuel pump in the reverse order of removal.

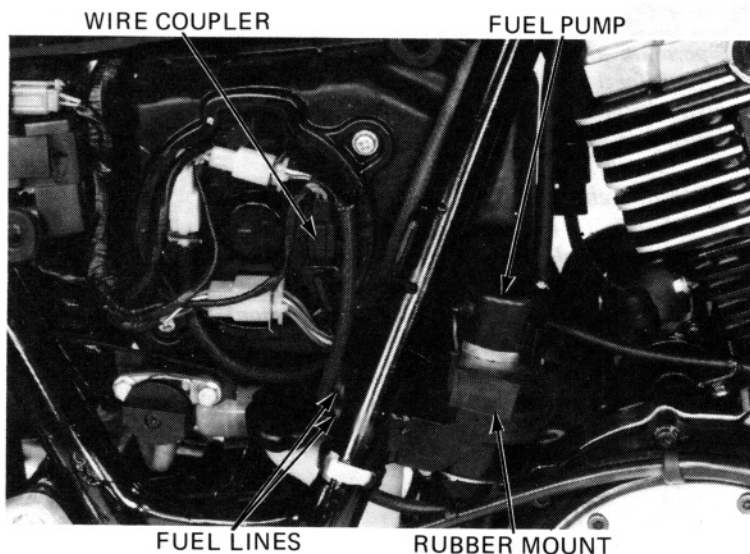

HIGH ALTITUDE ADJUSTMENT (USA only)

When the vehicle is to be operated continuously above 2,000 m (6,500 feet) the carburetor must be readjusted as follows to improve driveability and decrease exhaust emissions.

Warm up the engine to operating temperature. Stop and go driving for 10 minutes is sufficient.

Remove each pilot screw plug (page 4-8).

Turn each pilot screw clockwise 1 turn.

Adjust the idle speed to specification (page 4-1), with the throttle stop screw.

Drive new pilot screw plugs into the pilot screw bores (page 4-12).


NOTE:


This adjustment must be made at high altitude to ensure proper high altitude operation.

Attach a Vehicle Emission Control Information Update label onto the swingarm as shown. See SL #132 for information on obtaining the label.

NOTE:

Do not attach the label to any part that can be easily removed from the vehicle.

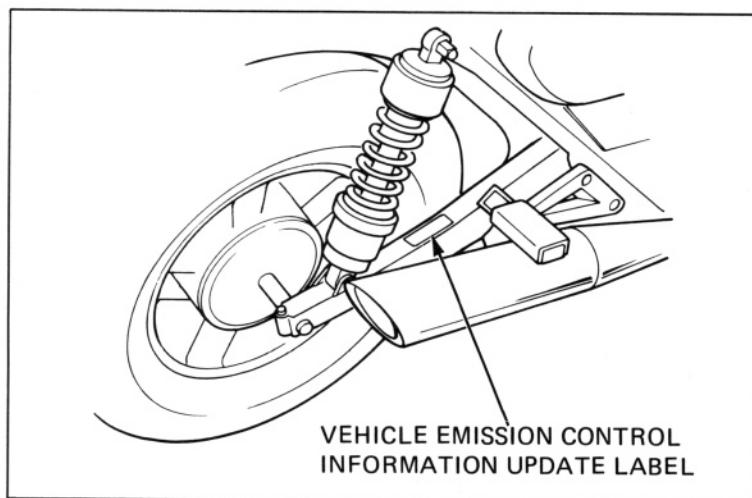

VEHICLE EMISSION CONTROL INFORMATION UPDATE
-HONDA MOTOR CO., LTD.
THIS VEHICLE HAS BEEN ADJUSTED TO
IMPROVE EMISSION CONTROL PERFORMANCE
WHEN OPERATED AT HIGH ALTITUDE. 
ALTITUDE PERFORMANCE ADJUSTMENT INSTRUCTIONS
ARE AVAILABLE AT YOUR AUTHORIZED HONDA DEALER.